

TURNING THE UNIT ON/OFF

To turn the unit on, press the ON button.

To turn the unit off, press the OFF button.

INCHES OR MILLIMETERS

Once the unit has been turned on, each press of the INCH/MM button will toggle the display between inches and millimeters.

While taking a measurement, press the INCH/MM button at any time to covert from one unit of measure to the other.

ZERO ADJUSTING

Clean the measuring surfaces by rubbing a clean piece of paper between the caliper surfaces several times.

Push the measuring surfaces together.

Reset the display to 0 by pressing the ZERO button.

NOTE

The graduated scale on the caliper body is for approximate reference only, the exact measurement, accurate to $\pm 0.2\text{mm}/0.01''$, is shown on the LCD display.

TURNING THE UNIT ON/OFF

To turn the unit on, press the ON button.

To turn the unit off, press the OFF button.

INCHES OR MILLIMETERS

Once the unit has been turned on, each press of the INCH/MM button will toggle the display between inches and millimeters.

While taking a measurement, press the INCH/MM button at any time to covert from one unit of measure to the other.

ZERO ADJUSTING

Clean the measuring surfaces by rubbing a clean piece of paper between the caliper surfaces several times.

Push the measuring surfaces together.

Reset the display to 0 by pressing the ZERO button.

NOTE

The graduated scale on the caliper body is for approximate reference only, the exact measurement, accurate to $\pm 0.2\text{mm}/0.01''$, is shown on the LCD display.

TURNING THE UNIT ON/OFF

To turn the unit on, press the ON button.

To turn the unit off, press the OFF button.

INCHES OR MILLIMETERS

Once the unit has been turned on, each press of the INCH/MM button will toggle the display between inches and millimeters.

While taking a measurement, press the INCH/MM button at any time to covert from one unit of measure to the other.

ZERO ADJUSTING

Clean the measuring surfaces by rubbing a clean piece of paper between the caliper surfaces several times.

Push the measuring surfaces together.

Reset the display to 0 by pressing the ZERO button.

NOTE

The graduated scale on the caliper body is for approximate reference only, the exact measurement, accurate to $\pm 0.2\text{mm}/0.01''$, is shown on the LCD display.

ALL OPERATIONAL DIFFICULTIES

If this unit does not function properly for any reason, replace the battery with a new high quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

ALL OPERATIONAL DIFFICULTIES

If this unit does not function properly for any reason, replace the battery with a new high quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

ALL OPERATIONAL DIFFICULTIES

If this unit does not function properly for any reason, replace the battery with a new high quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

BATTERY REPLACEMENT

Erratic readings, a faint display, or no display are all indications that the battery must be replaced. Slide the battery cover off (away from the display). Remove the exhausted battery and replace with a new 1.5 volt silver-oxide #357 battery. Make certain to insert the new battery with the positive (+) side visible. Replace the battery cover.

BATTERY REPLACEMENT

Erratic readings, a faint display, or no display are all indications that the battery must be replaced. Slide the battery cover off (away from the display). Remove the exhausted battery and replace with a new 1.5 volt silver-oxide #357 battery. Make certain to insert the new battery with the positive (+) side visible. Replace the battery cover.

BATTERY REPLACEMENT

Erratic readings, a faint display, or no display are all indications that the battery must be replaced. Slide the battery cover off (away from the display). Remove the exhausted battery and replace with a new 1.5 volt silver-oxide #357 battery. Make certain to insert the new battery with the positive (+) side visible. Replace the battery cover.

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration contact:

CONTROL COMPANY
4455 Rex Road
Friendswood, Texas 77546 USA
Ph. 281-482-1714 Fax 281-482-9448
sales@control3.com • www.control3.com

Control Company is ISO 9001 Quality-Certified
by DNV and ISO 17025 accredited as a
Calibration Laboratory by A2LA.

Traceable® is a registered trademark of © Control Company.
©2006 © Control Company. 92-3417-10 Rev. 2 20100630

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration contact:

CONTROL COMPANY
4455 Rex Road
Friendswood, Texas 77546 USA
Ph. 281-482-1714 Fax 281-482-9448
sales@control3.com • www.control3.com

Control Company is ISO 9001 Quality-Certified
by DNV and ISO 17025 accredited as a
Calibration Laboratory by A2LA.

Traceable® is a registered trademark of © Control Company.
©2006 © Control Company. 92-3417-10 Rev. 2 20100630

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration contact:

CONTROL COMPANY
4455 Rex Road
Friendswood, Texas 77546 USA
Ph. 281-482-1714 Fax 281-482-9448
sales@control3.com • www.control3.com

Control Company is ISO 9001 Quality-Certified
by DNV and ISO 17025 accredited as a
Calibration Laboratory by A2LA.

Traceable® is a registered trademark of © Control Company.
©2006 © Control Company. 92-3417-10 Rev. 2 20100630

**TRACEABLE®
CARBON-FIBER
CALIPER
INSTRUCTIONS**

**TRACEABLE®
CARBON-FIBER
CALIPER
INSTRUCTIONS**

**TRACEABLE®
CARBON-FIBER
CALIPER
INSTRUCTIONS**