

Installation & Operation Manual

Indianapolis, Indiana



Encore Power 4250

Encore Power
High-Low Tables

Power 4250
& Power 4200



Encore Power 4200 - left hand

TABLE OF CONTENTS

	Page
Introduction	3
Technical Use of Tables	
Intended Use of Tables	
Disposal of Equipment	
Maintenance and Service Questions	
Classification	
Symbols in this Manual	4
Electrical Requirements	
Environmental Conditions	
Safety Information	5
If Table Malfunctions	
Product at a Glance	6-7
Setting Up Your Table	8
Before Operating Table	
Electro Magnetic Interference	
Patient Load	
Power Features : Foot Control	9
Height adjustment	
Back adjustment	10
Hand Control Operation	
Height adjustment	
Back adjustment	
Table Features	11
Receptacles , accessory	
Receptacle Circuit Breaker	
Instrument Warming Drawer	12
Irrigation Basin	
Mains Power Entry Module	
Mains Power Circuit Breaker & reset	13
Mains Power Indicator	
Paper roll holder	
Paper cutter	
Pelvic Tilt	
Pelvic Tilt adjustment	
Perineal Recess	
Leg Extension	14
Stirrups	
Stirrup adjustment	
Storage	15
Vacuum Formed Top	
Caster Base (optional)	
Table Maintenance and Cleaning Recommendations	16
Upholstery Care	17
Semi-annual Maintenance Checklist	18
Troubleshooting	19
Product Specifications	20
Table Maintenance History	21-22
Guarantee of Quality Warranty	23
Index	24

INTRODUCTION

This manual covers the installation, operation and maintenance for the ENOCHS High-Low Examination Table Encore Series which includes the Encore Power 4250 and the Encore Power 4200. Please take extra time to read and understand all operations and maintenance requirements for maximum performance of this product. Improper operation of this product could result in injury to staff and/or patient as well as damage to the product.

TECHNICAL DESCRIPTION

This series of tables is designed for use in hospitals, clinics and private physician examination rooms. Examination tables have positioning capability to adjust table height and back section of the upholstered couch section by use of a foot control and/or optional hand control.

INTENDED USE OF TABLES

The Encore Power 4250 and Encore Power 4200 high-low tables are intended to be used for general examinations by qualified medical professionals. Tables are designed to position and support patients during procedures.

DISPOSAL OF EQUIPMENT

At the end of the product life, consult local codes and ordinances for proper disposal of table, accessories and other consumable goods.

Note: products may have become contaminated from normal use.

MAINTENANCE AND SERVICE QUESTIONS

Contact ENOCHS with questions concerning this manual, proper operation of the product or for the nearest Authorized Service Company. A Service Manual with circuit diagrams, component parts list and information to assist qualified technical personnel in repairing parts of the equipment designated repairable by manufacturer is available from ENOCHS upon request.

ENOCHS Examining Room Furniture

P.O. Box 50559 Indianapolis, IN 46250

Phone
800-428-2305

FAX
317-580-2944

E-mail
enochs@enochsmed.com

CLASSIFICATION: Class I, Type B Applied Part, IPXO



MEDICAL EQUIPMENT WITH RESPECT TO
ELECTRIC SHOCK, FIRE AND
MECHANICAL HAZARDS ONLY IN
ACCORDANCE WITH UL 60601-1,
IEC/EN 60601-1, CAN/CSA C22.2 No. 601.1

SYMBOL DEFINITIONS



CAUTION

This symbol indicates potential damage to equipment if information or instruction in the **CAUTION** is not followed.









WARNING

This symbol indicates a potential hazard to operator's or patient's personal safety if information stated within the **WARNING** is not followed.



This symbol indicates additional information for an applicable statement.

 <p>Attention, consult accompanying documents</p>	 <p>Type B, Applied Part</p>
 <p>Protective Earth Grounding</p>	 <p>Duty cycle (motor run time) 1 minute ON, 9 minutes OFF</p>
 <p>ON (power connection to the mains)</p>	<p>IPX0 Ordinary equipment (enclosed EQUIPMENT without protection against ingress of water)</p>
 <p>Off (power disconnection from the mains)</p>	<p>IPX1 Drip proof equipment (enclosed EQUIPMENT protected against splashing water)</p>

ELECTRICAL REQUIRMENTS

Electrical rating for the Encore Power 4250 table is 115V AC, 60 Hz, 10 ampere. Do not connect table to other voltages. If incorrect power source is used, table will not function properly and component parts could be damaged.

ENVIRONMENTAL CONDITIONS

TRANSPORTATION/STORAGE

Ambient Temperature Range: -20°C to +40°C (-4° F to 104° F)
 Relative Humidity: 10% to 100%
 Atmospheric Pressure: 500 hPa to 1060 hPa (0.49atm to 1.05atm)

OPERATIONAL

Ambient Temperature Range: +10°C to +37°C (+50° F to 98° F)
 Relative Humidity: 30% to 75%
 Atmospheric Pressure: 700 hPa to 1060 hPa

Safety Information

Failure to follow these instructions could result in bodily injury and/or product damage.


Mains power cord provides power for all table electrical operations. Before operating, confirm the unit is plugged into a Hospital Grade 115 Volt, NEMA ground wall receptacle.



DO NOT SUBMERGE FOOT CONTROL in water or any other liquid. Failure to follow this instruction will cause severe damage to product.

CAUTION

 Table is rated for a **500 pound patient load**, evenly distributed. Operating table with a patient over recommended load, will result in damage to table.



Duty cycle of the system is the run time of the table in minutes followed by a required rest time in minutes.

The Encore Power Series Tables are designed for intermittent operation with a duty cycle of 1 minute ON / 9 minutes OFF. **DO NOT EXCEED** duty cycle, doing so could damage system.



DO NOT use this product in presence of **FLAMMABLE ANESTHETIC MIXTURES WITH AIR OR WITH OXYGEN OR NITROUS OXIDE.**

All exposed metal parts of this product are grounded. For procedures involving cauterization or similar treatment, insulate patient from metal parts of table with non-conductive material. **Failure to follow recommended procedures could result in electrical shock and/or burns to patient.**

Before positioning or adjusting table make sure arms, legs, accessories and other objects are clear and safe from all moving parts of table.

DO NOT REPLACE IEC Mains Power Cord with other type of cord.

DO NOT USE other type of hand control.

DO NOT USE extension cord unless NEMA approved for specifications.


DO NOT USE table if mains power, foot control or hand control cord is cut, worn, frayed or otherwise damaged.

DO NOT USE table if abnormal sounds are heard during any adjustment.

IF TABLE MALFUNCTIONS

1. **IMMEDIATELY** stop using foot control or hand control.
2. Unplug mains power cord from wall outlet.
3. Assist patient off table if applicable
4. Report malfunction of table to ENOCHS at 1-800-428-2305.

PRODUCT AT A GLANCE

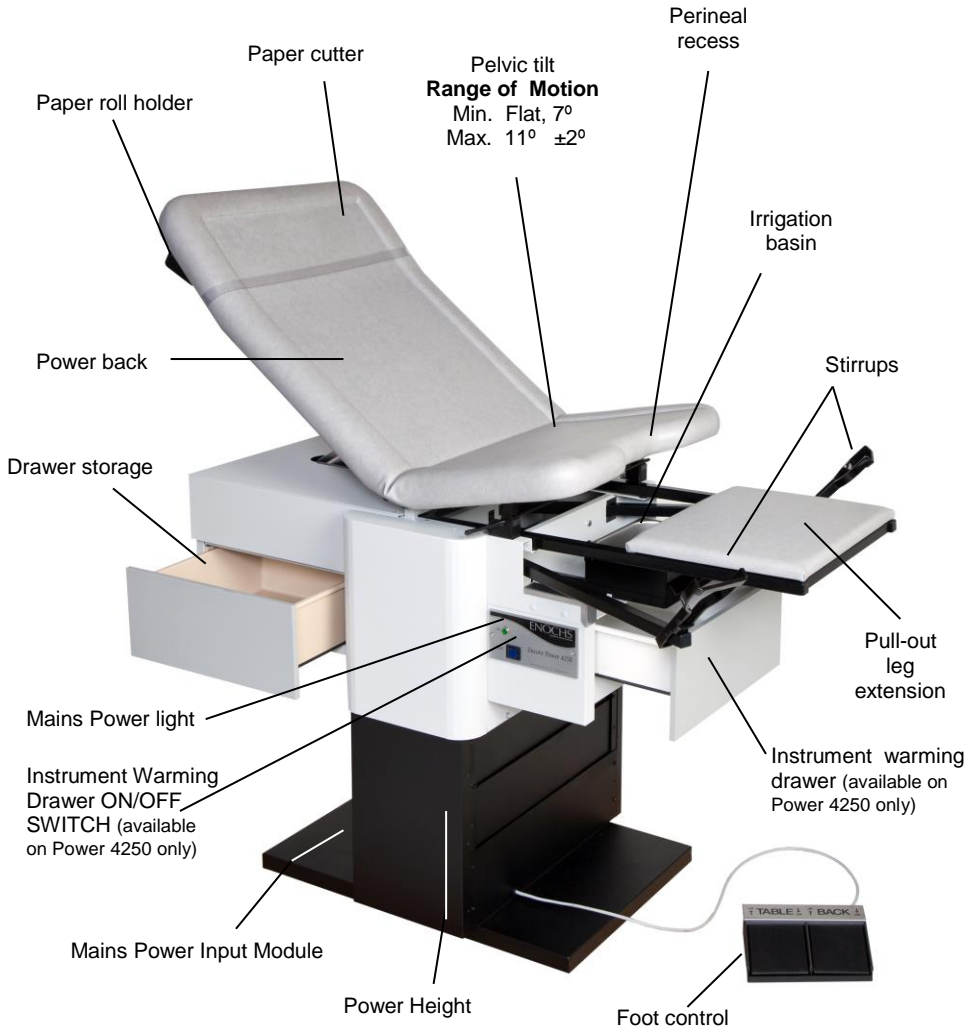

Range of Motion

Power Back : 0° horizontal to +80° $\pm 5^\circ$
 Power Height : Min: 24 ± 5 in. Max: 40 ± 5 in.

Front Panel



Mains Power Indicator

Instrument Warmer ON/OFF (applies to Power 4250 only)

Model Name

Back Panel



Electrical Accessory Receptacles

Receptacle Circuit Breaker

Hand Control Input

Serial Number Plate

(available on Encore Power 4250 only)

Hand Control (Optional Accessory)

Mains Power Input Module




ON/OFF Switch & Circuit Breaker Reset

Power Supply Cord Input

Back Up/ Down Adjustment

Height Up/ Down Adjustment

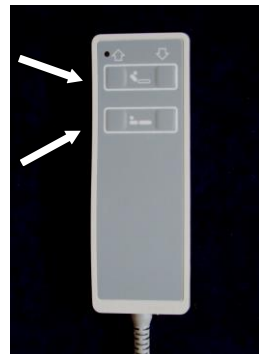

SETTING UP YOUR TABLE



Remove table from skid by lifting only at table's base. **DO NOT LIFT AT COUCH SEAT, HEAD SECTION OR BY STIRRUPS, LEG EXTENSION or BASIN DRAWER** -- *lifting at these points could result in product damage and/or bodily injury.*

Table rating is 115V AC, 60 Hz, 10 ampere.

Connect table to correct electrical source. Do not connect table to other voltages. If incorrect power source is used, table will not function properly and component parts could be damaged.

Once table is positioned in the final location, it must sit firmly on all four levelers to operate correctly. To level unit adjust the four threaded levelers located under each corner of the table base.



The Equipment shall be transported only when the unit is in the fully down position without the patient.

BEFORE OPERATING TABLE

- **ALWAYS** place the foot control on floor away from all moving parts of the table
- **ALWAYS** keep hand control and cord clear from all moving parts of the table
- **NEVER** place foot control on the base of the table to operate
- Keep patient feet, legs and arms away from all moving parts
- Keep all accessories, room equipment and operator stools away from all moving parts of table

ELECTROMAGNETIC INTERFERENCE

Electromagnetic interference can impact performance of medical equipment. If interference is experienced, determine interfering device and, if practical, remove it from the area. If removing the interfering device is not practical,

- Increase distance between affected devices
- Connect table or any affected devices into isolated circuits
- Contact ENOCHS if interference persists

 
PATIENT LOAD

The Encore Power Series tables are designed for a patient a load of 500 lbs. evenly distributed. Staff should take special care to position patients over table's center point and **NOT** at an edge, end of table or on the leg extension.



DO NOT EXCEED table's weight limit to avoid product damage.

POWER FEATURES



Tables are designed for intermittent operation with a duty cycle of 1 minute ON / 9 minutes OFF. **DO NOT EXCEED** duty cycle, doing so could damage system.

FOOT CONTROL



"Easy Touch" foot control allows fast convenient adjustment of table's HEIGHT and the couch BACK .



Place Foot Control in clear area to avoid accidental activation. **NEVER** place foot control on base of table to operate, always place foot control away from any moving parts of table to avoid product damage and/or bodily injury.

Before positioning or adjusting table, make sure arms, legs, accessories and other objects are clear and safe from all moving parts of table to prevent bodily injury to patient or staff and/or product damage.



Place Foot Control in a clear plastic bag or position unit to a safe area to avoid damage by solutions used in procedures and to assist in maintaining a clean unit.

FOOT CONTROL OPERATION

Height adjustment



Raise Table: Place foot firmly on center of pedal marked **TABLE**. Depress left side of pedal designated by **▲ UP**. When desired height is reached, release pressure from pedal

Lower Table: Place foot firmly on center of pedal marked **TABLE**. Depress right side of pedal designated by **▼ DN**. When desired height is reached, release pressure from pedal.

Back adjustment



Raise Back: Place foot firmly on center of pedal marked **BACK**. Depress left side of pedal designated by **↑UP**. When desired angle is reached, release pressure from pedal.

Lower Back: Place foot firmly on center of pedal marked **BACK**. Depress right side of pedal designated by **↓DN**. When desired angle is reached, release pressure from pedal.

HAND CONTROL



The hand control (*optional accessory*) allows fast easy adjustment of table's HEIGHT from 24" to 40" and the couch BACK to various degrees from horizontal to an 80° chair position.

DO NOT CONNECT ANY OTHER HAND CONTROL INTO INPUT PORT.


To install: Connect hand control cable to input port on the back face plate of table and secure with fasteners.

To disconnect : Unscrew fasteners, securely grasp plug and pull from port. **DO NOT PULL** plug out with hand control cable.



Before activating hand control, confirm area around all moving parts of the table is clear of any obstructions to avoid product damage and/or bodily injury.

HAND CONTROL OPERATION

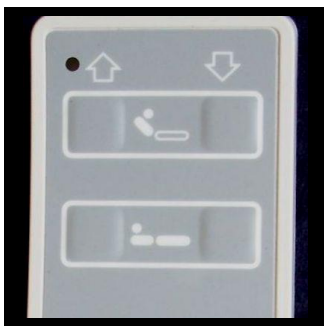

Height adjustment

Raise Table: Press button marked **TABLE ▲**. When desired height is reached, release pressure from button.

Lower Table: : Press button marked **TABLE ▼**. When desired height is reached, release pressure from button.

Back adjustment

Raise Back: Press button marked **BACK ▲**. When desired angle is reached, release pressure from button.

Lower Back Press button marked **BACK ▼**. When desired height is reached, release pressure from button

TABLE FEATURES

ELECTRICAL ACCESSORY RECEPTACLES (Encore Power 4250 only)



UL Listed, hospital grade, dual accessory receptacles are located on back side of the table. A circuit breaker with a reset button is directly below receptacles. Unit has a total 3.9 amp maximum load.

ELECTRICAL ACCESSORY RECEPTACLE CIRCUIT BREAKER (Encore Power 4250 only)

(Encore Power 4250 only)



If accessory receptacle circuit is overloaded by exceeding the maximum amperage, the circuit breaker will trip. The button on the circuit breaker will pop out, interrupting power to receptacles. Receptacles will not function until circuit is reset.

Reset: Depress reset button to reestablish power to receptacles.



DO NOT EXCEED maximum receptacle load of 3.9 amps total

CAUTION



WARNING


Risk of Electrical Shock Hazard: Accessory equipment connected to the accessory receptacles must be certified according to the medical device safety standards (i.e., UL 60601-1, CAN/CSA C22.2 No. 601.1, or IEC 60601-1 for electro-medical equipment). All combinations of equipment must be in compliance with IEC 60601-1-1 systems requirements. Anyone connecting additional equipment to the accessory receptacle configures a medical system, and therefore is responsible that the system complies with the requirements of the system standard IEC 60601-1-1.

The use of accessory equipment not complying with the safety standards UL 60601-1, CAN/CSA C22.2 No. 601.1, or IEC 60601-1 will lead to a reduced level of safety of the resulting system.


Read and retain all user manuals for accessory equipment powered by the receptacles to ensure continued safety of the system.

WARNING! – Risk of Electrical Shock Hazard: Do not plug a multiple socket outlet or an extension cord into the accessory receptacles of the examination table.

INSTRUMENT WARMING DRAWER (applies only on Encore Power 4250)

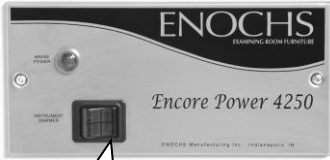

located at footend of table, the instrument warming drawer is designed to warm speculums and instruments to approximate body temperature. The ON/OFF toggle switch with circuit breaker is located on the front side of the drawer for instant confirmation of unit's status.

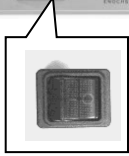

Warmer ON: Press "ON" side of switch. Switch will be illuminated when unit is ON.

Warmer OFF: Press "OFF" side of switch. Switch will not be illuminated when unit is OFF.

Reset circuit breaker: Turn switch OFF, then ON

IRRIGATION BASIN



The 4" (10.2 cm) deep stainless steel irrigation basin fits into the basin drawer and operates independent of the leg extension. Basin easily lifts out for cleaning.

To Access: Grasp basin drawer handle, extend to desired length.

To Remove Basin: Extend basin drawer to full extension and lift basin out.

To Store: Gently push basin back under seat section.



Irrigation basin drawer is not designed to support any patient weight.

MAINS POWER INPUT MODULE



The mains power connection at the base of the table, provides power for tables height and back adjustment as well as the dual electrical receptacles and instrument warmer featured on the Encore Power 4250. The module consists of an ON/OFF toggle switch, internal circuit breaker and IEC input.

Connect Mains Power: Plug the power cord's IEC end into the Mains Power Entry Module then plug cord into a NEMA wall receptacle. Confirm ON/OFF switch is in the ON position.

Disconnect Mains Power: Unplug power cord from wall outlet or press the ON/OFF switch to the OFF position



UNDER NO CIRCUMSTANCES SHOULD Mains Power Cord be replaced with any other type cord.

MAINS POWER CIRCUIT BREAKER



This double pole protective device trips if the rated current level is exceeded, interrupting the electrical current to the table. When breaker is tripped, the ON/OFF toggle switch is in the neutral position.

To Reset: Press mains power ON/OFF Switch to OFF position, then to the ON position.

MAINS POWER INDICATOR

The green indicator light on front side of table illuminates when table has power.

PAPER ROLL HOLDER


Holder is located at head end section of table and accommodates 18" (45.7 cm) or 21" (54.3 cm) table paper.

Installing Paper Roll: Lift end of paper roll rod out of the open u-bracket on back of table couch, slide paper roll onto rod and insert rod end back into bracket.

PAPER CUTTER

Located at head end section to reduce cross contamination, cutter is attached to upholstered top by quick release snaps located on either side of couch back.

PELVIC TILT

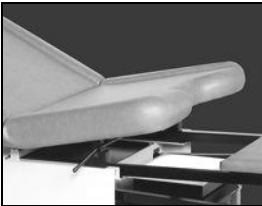

The three position pelvic tilt manually adjusts at flat $^{\circ}$, 7° , and 11° . Tilt lowers from either side of table with use of release lever located under the seat section.



WARNING


BEFORE USING pelvic tilt release levers, confirm all hands, fingers and arms are away from under seat section.

PELVIC TILT ADJUSTMENT

To Raise: Grasp either side of seat section, lift to desired degree. Seat will automatically lock at chosen angle.

To Lower: Support seat section with one hand, depress release lever located under the seat section on either side of table and lower seat to desired degree.

PERINEAL RECESS

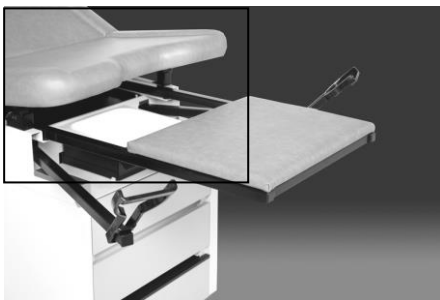

Recessed at the end of the seat section is a recessed area that provides greater access to patient's perineal region.

The recess is 10" wide at opening and 2" deep at center.

PULL-OUT LEG EXTENSION



The extra wide padded leg extension moves in and out from under the seat section. Extension is padded and upholstered in durable vinyl. Independent operation allows fast transition between leg extension and basin. Patients with limited hip rotation may be positioned with feet on extension while still allowing full access to basin by practitioner.

To Extend: Grasp front edge of extension and pull out to desired length.

To Store: Push unit gently back under seat section of table.


Irrigation Basin Access: push extension into stored position lifting slightly while pushing under seat section for direct access to basin.



CAUTION

Do not use leg extension to support entire patient weight. Extension designed to support weight of lower portion of patient's legs.

STIRRUPS

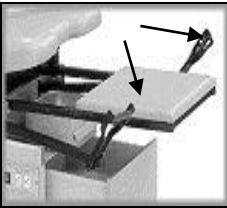

Concealed when not in use, the multi-position stirrups offer length as well as lateral adjustment to accommodate each patient. Stirrup locks into position with weight of patient's foot. Stirrup shoes are coated in durable Plastisol for efficient cleaning and patient comfort



WARNING

Confirm stirrup bars are secure in the lateral position before using.

Stirrups are designed to support patient's legs, not entire patient's weight

STIRRUP ADJUSTMENT

Lateral Adjustment: Grasp stirrup bars, located under seat section and pull out to full bar extension. Unfold stirrup shoes. Lift bar approximately ½"(1.3cm) and move outward, lowering to desired angle.

Length Adjustment: First make desired lateral adjustment of stirrups.

To Decrease Stirrup Bar Length: Firmly push stirrup bar into table stopping at desired length. Stirrup bar automatically locks, prohibiting increase in length.

To Increase Stirrup Bar Length: Remove weight from stirrups, lift bar approximately ½ " (1.3cm), return to center position and bring to full extension. Make lateral adjustment to desired position then push bar into table to desired length.

Perineal Angle: To increase patient's leg angle for great perineal access, decrease stirrup bar length creating a shorter distance from stirrup shoe to end of table.

Stirrup Storage: Lift bars approximately ½" (1.3cm) and move to center position. Fold down stirrup shoes against bar and gently slide bars under seat section.

STORAGE

Table has a 6" deep side drawer and a 4.5" deep footend drawer totaling 1.4 cubic feet of storage area. High impact polystyrene drawers with laminate fronts have an integrated stop that eliminates accidental dumping of drawer contents. Drawers operate on a steel reinforced, side-guide mounting system providing disciplined, non-binding drawer movement. Nylatron strips on the bottom edges of the drawer protect against wear and allow smooth drawer movement. Drawers rated at 45 lbs. each.

Removal of Footend Drawer: Must be done by qualified technician.

Removal of Side Drawer: Pull drawer out to full extension, lift approximately 15° then remove.

Replace of Side Drawer: Inserting drawer at approximately 15° angle, lower front edge while pushing drawer into the table.

VACUUM FORMED TOP

Top is 100% seamless and manufactured without crevices or decorative embossing that collect dirt and makes cleaning difficult. Top is padded with high density foam with additional contoured padding on the sides for patient comfort. Top is constructed with a steel frame and backing designed for strength and durability. The perineal recess is an exclusive feature of this top.

CASTER BASE (optional)



Caster base has four (4) 3-1/2" casters - two swivel and two fixed. A foot actuated locking mechanism is located on head end of unit. Caster base raises table approximately 1-1/4" off floor

Caster base is intended to remain attached to table after initial installation.

To Lock: Securely push down locking pedal at the headend of the caster base with foot.

To Unlock: Carefully press down on locking bar to release locking mechanism.



WARNING

Caster base designed for moving table without patient.

TABLE WITH CASTER BASE IS NOT RECOGNIZED BY THE FDA AS A TRANSPORT UNIT AND SHOULD NOT BE USED IN PLACE OF A STRETCHER.

Using tables with caster base in a manner other than what manufacturer has intended could result in patient injury or product damage.

The Equipment shall be transported only when the unit is in the fully down position without the patient.

TABLE MAINTENANCE

ANNUAL PREVENTATIVE MAINTENANCE INSPECTION by an authorized service group is recommend by Manufacturer. Reference Semi-annual Maintenance Checklist , page 18

CLEANING RECOMMENDATIONS

SPECIAL CLEANING ALERT

Follow guidelines for cleaning procedures set forth by the CDC (reference Isolation Precautions), OSHA (reference Bloodborne Pathogen Standards), APIC (Association for Practitioners in Infection Control) and any other appropriate federal or state agencies.

PAINTED OR STAINLESS STEEL SURFACES: NEVER USE ABRASIVE CLEANERS on these surfaces. Abrasive cleaners will cause irreversible damage to finishes. Clean stainless steel surfaces with commercial cleaners designed for this type of surface. Most soil can be cleaned from painted surfaces with mild soap and water. Disinfect with cleaners formulated for painted or stainless steel surfaces.

FOOT CONTROL: BEFORE CLEANING unplug table from wall receptacle. DO NOT USE excessive liquid on foot control, doing so could result in product damage. With soft bristle brush, remove loose dirt particles from pedal tread. Clean outer case with sponge or soft cloth. To avoid damage by housekeeping, place foot control on table base for storage when not in use.



CAUTION

DO NOT SUBMERGE FOOT CONTROL in water or any other liquid. Failure to follow this instruction will cause severe damage to product.

HAND CONTROL: BEFORE CLEANING unplug table from wall receptacle. Using a sponge or soft cloth, clean outer case with disinfecting solution recommended for vinyl or plastic surfaces. To avoid damage by housekeeping, properly store hand control on table when not in use.

VACUUM FORMED TOP: Manufacturer of material recommends cleaning upholstered surface after each patient. Certain substances will stain if not removed immediately, consult Manufacturer's Upholstery Cleaning, page 17. Most soil can be easily removed with warm soapy water and several clear rinses. Disinfect using products designed specifically for vinyl. **DO NOT USE cleaners formulated for nonporous surfaces.**

UPHOLSTERY CARE

SPECIAL ALERT

Follow guidelines for cleaning procedures set forth by the CDC (reference: Isolation Precautions), OSHA (reference: Bloodborne Pathogen Standards), APIC (Association for Practitioners in Infection Control) and other appropriate federal or state agencies.

Upholstery surface should be cleaned after each patient. Vinyl upholstery requires general periodic cleaning to maintain a neat appearance and prevent build up of dirt and contaminants. Warm soapy water and several clean water rinses may be used for general cleaning of upholstery. **Indiscriminate use of strong solvents, bleaches or cleaners formulated for nonporous surfaces will severely damage or discolor vinyl surface.** Procedures for removing substances that cause staining are listed below.

SUBSTANCE	SOLUTION	PROCEDURE
Blood	Cold water- DO NOT USE hot or soapy water, this will set stain. THEN USE 3/4 cup bleach to one gallon warm water for final cleaning	IMMEDIATELY , following appropriate guidelines, wipe blood from surface. If stain remains, use household ammonia directly on stain followed by a cold water rinse. THEN Wipe entire surface with bleach solution followed by a clear cold water rinse.
Vomitus	Commercial Disinfectant THEN USE 3/4 cup bleach to one gallon warm water for final cleaning	IMMEDIATELY , following appropriate guidelines, wipe area until substance is removed. Rinse with cold water. THEN Wipe entire surface with bleach solution followed by a clear cold water rinse.
Urine	1 part household ammonia to 5 parts water THEN USE 3/4 cup bleach to one gallon warm water for final cleaning	IMMEDIATELY , following appropriate guidelines, wipe down area until substance is removed. Rinse with clear water. THEN Wipe entire surface with bleach solution followed by a clear cold water rinse.
Surface Mildew	1 Tablespoon bleach to one quart water	Sponge area until mildew is removed. Rinse with clear cold water.
Ball-point Ink	Isopropyl alcohol 70% followed by clear water rinse	IMMEDIATELY remove mark using full strength Isopropyl alcohol 70% . Rub lightly until ink is removed. Rinse with a clear cold water. Ink will stain vinyl permanently if not removed immediately.
Chewing Gum, Lip Stick, Grease, Oil, Shoe Polish Scuffs	Mineral Spirits or Carbon Tetrachloride	Gum: Following appropriate guidelines, peel off loose gum. Using a soft cloth saturated with solution, rub soiled area lightly until gum is removed. Rinse with clear cold water. Lip stick, grease, oil: Taking care not to smear substance, gently remove substance with soft cloth and solution. Rinse with clear cold water. Shoe polish: IMMEDIATELY remove polish as it contains dye which permanently stain upholstery. Rinse with a clear cold water rinse.

For substances not listed call ENOCHS 1-800-428-2305 for instructions

The following cleaners are **NOT RECOMMENDED** for this product:

powder abrasives
lacquer solvents
waxes

steel wool
peroxide
vinyl cleaners

industrial strength cleaners
full strength chlorine bleach
vinyl conditioners

Semi-annual Maintenance Checklist

Maintenance of the table is responsibility of the owner. Manufacturer recommends following areas be inspected by certified technician every **six months** to assure proper operation of table. Copy of this checklist should be used for each inspection and maintained in table's master file. Each inspection area is required to indicate a pass or fail status. ALL AREAS failing inspection must be serviced/repared immediately by certified technician. See ENOCHS Service Manual for Power Encore Series Tables for repair/service advise and instructions. Direct all questions to ENOCHS at 1-800-428-2305.

Serial Number: EH _____ Inspection Date: _____

PASS	FAIL	INSPECTION AREA
<input type="radio"/>	<input type="radio"/>	grounding continuity
<input type="radio"/>	<input type="radio"/>	mains power cord and electrical plug free from all nicks, cuts, abrasions or any other damage.
<input type="radio"/>	<input type="radio"/>	mains power cord ON/OFF switch operates
<input type="radio"/>	<input type="radio"/>	mains power indicator light on front face plate functional
<input type="radio"/>	<input type="radio"/>	table's receptacles functional (applies to Encore Power 4250 only)
<input type="radio"/>	<input type="radio"/>	warming drawer indicator ON/OFF switch functional (applies to Encore Power 4250 only)
<input type="radio"/>	<input type="radio"/>	warming drawer functional (applies to Encore Power 4250 only)
<input type="radio"/>	<input type="radio"/>	all foot control pedals move freely, returning to neutral position without sticking
<input type="radio"/>	<input type="radio"/>	foot control power cord free of damage and firmly held in place by strain relief at back of foot control and at table base
<input type="radio"/>	<input type="radio"/>	TABLE UP/DN functions exhibit smooth range of movement
<input type="radio"/>	<input type="radio"/>	BACK UP/DN functions exhibit smooth range of movement
<input type="radio"/>	<input type="radio"/>	pelvic tilt adjusts smoothly and easily
<input type="radio"/>	<input type="radio"/>	leg extension moves freely in and out of table
<input type="radio"/>	<input type="radio"/>	irrigation basin drawer moves freely in and out of table
<input type="radio"/>	<input type="radio"/>	stirrup length and lateral adjustments have smooth range of movement
<input type="radio"/>	<input type="radio"/>	upholstery is free from cuts, rips or punctures
<input type="radio"/>	<input type="radio"/>	accessories rails (if applicable) are secure
<input type="radio"/>	<input type="radio"/>	accessories in good working order

TROUBLESHOOTING

Confirming Mains Power Procedure

Confirm wall receptacle has power.

If receptacle does not have power, call building maintenance.

If receptacle has power then confirm **Mains Power Cord** is correctly installed.

Correctly install cord and if table functions, no additional action needed.

If table does not function, confirm the table's **Mains ON/OFF Circuit Breaker** has not been tripped.

If tripped, reset and table functions, no additional action required

If table does not function, call for service

SYMPTOM	CAUSE	SOLUTION
Table does not respond to foot or hand control, Mains Power Light is not ON.	Table not getting Mains Power	Follow instructions above to Confirm Power to Table
Table does not respond to foot or hand control, Mains Power Light is ON	Internal Problem	Call for service
Table height does not work, but table back works		
Table back does not work, but height works		
Electrical receptacles and warmer work, but table height and back will not respond to foot control		
Electrical receptacles and warmer work, but table height and back will not respond to hand control	A. Hand control not installed correctly B. Internal Problem	A. Make sure connection of hand control to table is solid. B. Call for service
Instrument warmer not warming	A. Warmer ON/OFF switch circuit breaker tripped B. Table does not have power	A. Reset circuit breaker B. Follow instructions above to Confirming Power to Table
Electrical receptacle not working	A. Receptacle circuit breaker tripped B. Table does not have power	A. Reset circuit breaker B. Follow instructions above to Confirming Power to Table

PRODUCT SPECIFICATIONS

Adjustments: **Power:** height: Min: 24 ±.5 in. Max: 40 ±.5 in.
back: 0° horizontal to 80° ±5°

Manual: pelvic tilt: flat, 7°, 11° (± 2°)
leg extension: extends out 19" from end of seat section

Classification: Class 1, Type B Applied Parts IPX0

Controls: "hands free" foot control (standard) or hand control (optional).
Both are Safety Extra-Low Voltage (SELV) and IPX1

Couch top: 100% seamless vacuum formed style, all steel frame construction

Electrical receptacles: hospital grade dual electrical receptacles with circuit breaker and reset

Instrument warmer: located in foot end drawer

Instrument warmer ON/OFF switch: located on front side of table, illuminates when warming unit is ON. Switch has internal circuit breaker with reset

Irrigation basin: 4" deep stainless steel basin

Mains power entry module: IEC connection, internal circuit breaker with reset

Mode of operation: Table: Intermittent Operation ,
duty cycle:1 minute ON / 9 minutes OFF

Receptacles & warming drawer: Continuous Operation

Paper roll holder: accommodates 18" or 21" paper widths

Patient load: 500 lbs., evenly distributed on main couch

Perineal recess: moulded without seams , 10" W x 2" D at center

Power system: electro-mechanical


Protection against ingress of fluids: Table: IPX0 Foot control: IPX1
Hand control(optional): IPX1

Ratings: Table: 115V 60 Hz 10 amps
Receptacles : 115V 60Hz 3.9 amps Total Load

Stirrups: positive lock multi-position stirrups, length and lateral adjustment

Storage: side drawer-15.5" Wx15" D x 6" H foot-end drawer-15.5" Wx15" D x 4.5" H
total storage space - 1.4 cubic feet

Table weight: 415 lbs.
Dimensions:

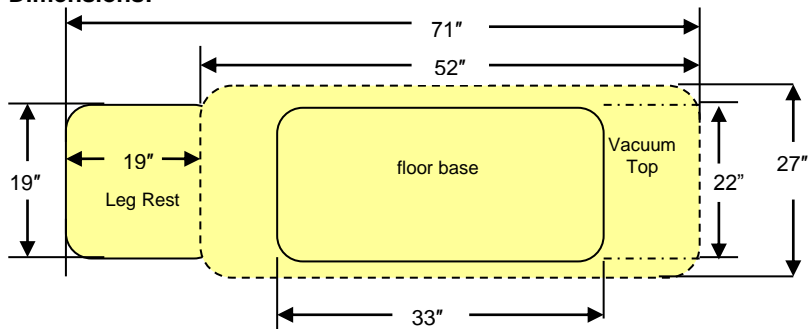

ENOCHS Guarantee of Quality

ENOCHS , Inc. guarantees ENOCHS products to be free from defects in material or workmanship under normal installation, use and service, for a period of four years for the Encore Power 4250 and two years for the Encore Power 4200. Warranty period is from date of shipment from our factory, unless otherwise specified for a specific product. All items and component parts manufactured for ENOCHS by others are warranted against defects for a period equal to warranty offered by original equipment manufacturer.

This guarantee is invalid if product is damaged as a result of misuse, abuse, neglect or alteration. Transportation costs for return of product or part is responsibility of purchaser. All other expressed or implied warranties of the company are superseded

Serial Number: EH Purchase Date: _____

Purchased From: _____

Phone: _____

Service Group: _____

Phone: _____

ENOCHS CUSTOMER SERVICE 1-800-428-2305

INDEX

- Back adjustment, 10
- Before operating table, 8
- Caster base, 15
- Cautions
 - foot control, 5, 16
 - irrigation basin, 11
 - patient load, 5,8
 - pull out leg extension, 13
 - receptacle load, 11
 - symbol, 4
- Cleaning
 - foot control, 16
 - not recommended, 17
 - painted surfaces, 16
 - stainless steel surfaces, 16
 - vacuum formed top, 16, 17
- Circuit breaker
 - receptacles, 11
 - reset, 11
 - mains power entry module, 12
 - reset, 13
- Disposal of table, 3
- Duty cycle, 4,5,9
- Electrical
 - cut or damaged cord, 5
 - accessory receptacles, 11
 - circuit breaker, 11
 - reset, 11
 - maximum amp load, 11
 - requirements, 4
- Electro Magnetic Interference, 8
- Extension cord use, 5
- Foot control
 - cautions, 5,16
 - cleaning, 16
 - features, 9-10
 - notes, 9
 - operation, 9-10
 - warnings, 9
- Height adjustment, 9
- Hand control
 - operation, 10
- Introduction, 3
- Intended use of table, 3
- Instrument warming drawer, 12
- Irrigation basin
 - adjustment, 12
 - features, 12
- Lifting table, 8
- Leg extension
 - adjustment, 14
 - features, 14
- Mains power input module, 12
 - circuit breaker, 13
 - cord replacement, 5
 - indicator ,13
 - reset, 13
- Maintenance,
 - contact information, 3
 - log, 21-22
 - semi-annual checklist, 18
 - questions, 3
- Malfunction of table, 5
- Operational conditions, 4
- Paper cutter, 13
- Paper roll holder, 13
- Patient load, 8
- Pelvic tilt, 13
 - adjustment, 13
- Power features, 9
 - warnings, 9, 10
- Perineal recess, 13
- Product at a glance, 6-7
- Purchase record, 23
- Range of motion, 6
- Safety information, 5
- Symbol definitions, 4
- Setting up table, 8
- Specifications, 20
- Stirrups
 - adjustment, 14
 - features, 14
- Storage , 15
- Technical description 3
- Transportation/storage conditions, 4
- Troubleshooting guide, 19
- Upholstery care, 17
- UL compliance, 3
- Vacuum formed top
 - cleaning , 16, 17
 - features, 15
- Warnings
 - adjusting/ positioning, 5,9,10
 - caster base, 15
 - cauterization type procedures, 5
 - duty cycle, 5
 - explosive atmosphere, 5
 - foot control, 9
 - leg extension, 13
 - moving table, 8
 - oxygen enriched areas, 5
 - patient load, 8
 - pelvic tilt, 13
 - power cord replacement, 12
 - removing from skid, 8
 - stirrups, 14
 - symbol, 4
- Warranty, 23