

Craftsbury Elevated Raised Beds

2' x 3' and 2' x 6'

GARDENERS
SUPPLY COMPANY
1-800-876-5520 • gardeners.com
info@gardeners.com

Tools Needed

Drill/Screw Gun (not included).
Locate a level area.

Parts List

(2) Short Panels
(2) Long Panels
(4) Legs
Screws – (19) 1.25" Long Screws and (20) 3/4" Short Screws
Floor Boards (4) for 2 x 3 – (9) for 2 x 6
Fabric Liner

Assembly

NOTE: Assembly is easiest with two people



Figure 1

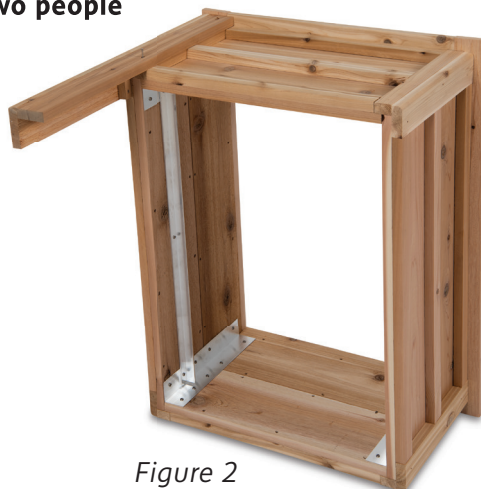


Figure 2



Figure 3

1. Line up ends of Short Panel and Long Panel as shown in Figure 1. Make sure panels are even. Secure them by inserting short screws through corner support attached to Long Panels.
2. Repeat Step 1 to attach remaining Panels.
3. Place bed on one side and attach legs to each corner using the long screws through the pre-drilled holes. Refer to Figure 2. (Be sure legs hit the bottom of top trim).
4. Turn bed over and place floorboards across supports. Gapping is ok. Reference Figure 3.
5. Lay out fabric liner and fill with soil.

If you purchased our Self-Watering Insert (sold separately - 2'x2' #8600643 or 2'x6' #86127890, do not use the liner or install the floor boards. You will need to use 1 floor board with the 2' x 3' Elevated Raised Bed.

To assemble the Self-Watering Inserts follow the instructions included with them.

For a handy **Soil Volume Calculator**, interactive **Kitchen Garden Planner** and how-to articles and videos on how to grow in raised beds, visit us at **gardeners.com**

8% of our profits go back to our communities.
Learn more at gardeners.com/force-for-good

