

**PUREZERO\***

Cleanroom Nitrile Gloves



**MANAGE YOUR CLEANROOM RISKS  
WITH HALYARD\* PUREZERO\*  
NITRILE GLOVES**



**PUREZERO\***

## Cleanroom Nitrile Gloves

Because you're responsible for managing risks in your cleanroom operation, choosing the right cleanroom glove is critical.

Your gloves have a big job to do, protecting your workers as well as your product and your process. Plus you need a reliable supply to avoid operations disruption. That's why we created HALYARD\* **PUREZERO\*** Cleanroom Gloves.

**PUREZERO\*** Cleanroom Gloves are ideal for applications that involve handling delicate equipment in microelectronics, semiconductors, optics, pharmaceutical and medical device manufacturing applications. In fact, they are specifically designed to meet the stringent requirements of cleanroom environments.

**PUREZERO\*** Gloves are designed to exact standards, to help you:

- manage the risks associated with user comfort and protection
- manage product contamination
- manage supply chain resiliency



# PUREZERO\*

## Cleanroom Nitrile Gloves

### THE RISK: USER COMFORT AND PROTECTION

The accelerator-free<sup>1</sup> formulation of PUREZERO\* Cleanroom Nitrile Gloves is the solution. It reduces the risk of allergies and skin irritation associated with accelerator chemicals in other nitrile gloves. As a result, PUREZERO\* Gloves are comfortable to wear, allowing workers to focus on their delicate tasks rather than their gloves.

PUREZERO\* Cleanroom Nitrile Gloves are designed to protect workers with effective barrier protection against chemical splash, micro-organisms and viruses.

Our gloves are PPE Category III certified according to the following standards:  
EN ISO 374-5:2016 Micro-organism and Virus Protection  
EN ISO 374-1:2016/Type C K-Low Chemical Splash Protection  
EN 420:2003 +A1:2009 General Requirements for Protective Gloves  
EN ISO 374-4 Resistance to Degradation by Chemicals



### THE RISK: PRODUCT CONTAMINATION

The solution is the consistent quality of PUREZERO\* Cleanroom Gloves, ensuring low particle and endotoxin levels. HALYARD\* PUREZERO\* Gloves are manufactured and packaged at our ISO 9001 facility in state-of-the-art cleanrooms and are recommended for ISO Class 3 or higher and Grade A/B/C/D cleanrooms. Our gloves are clean processed (washed repeatedly in deionized water) to ensure consistent control of low particles, extractables and endotoxin levels.

- Low Particle Levels (max 950 > 0.5µm/cm<sup>2</sup> for white gloves, max 1200 > 0.5µm/cm<sup>2</sup> for blue gloves)
- Sterility Assurance Levels (SAL) of 10<sup>-6</sup> and an endotoxin level of 20 units/pair maximum
- AQL of 1.0 for pinholes
- Static dissipative in use<sup>2</sup>
- Double bagged plus case liner



You can rely on consistent quality, with Certificates of Analysis (CoA), and Certificates of Irradiation (CoI) easily accessible online for every production lot. You can also find the Declaration of Conformity (DoC) documents showing compliance to applicable regulations and standards, all at [www.halyardhealth.com/information](http://www.halyardhealth.com/information).

**PUREZERO\***

## Cleanroom Nitrile Gloves




Manufactured at OUR OWN  
Safeskin Facility in Thailand.

### THE RISK: SUPPLY CHAIN RESILIENCY

**PUREZERO\* Cleanroom Gloves are the solution, ensuring reliable supply, regulatory compliance and consistent quality.**

HALYARD\* has manufactured private label cleanroom gloves for more than 20 years at our Safeskin Medical & Scientific (Thailand) Ltd. manufacturing facility, which holds ISO 9001 and ISO 13485 certifications.

We control the materials and design while adhering to strict quality standards and product specifications in our own facilities, with our own teammates. Quality and sterility assurance levels are guaranteed, with all raw materials and components traceable to their original supplier. And with our global product codes, you can use **one code/SKU from HALYARD\* globally at all of your production facilities.**

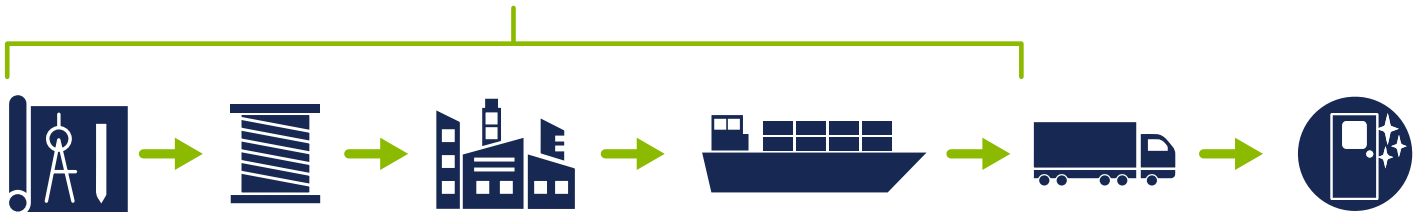

From raw materials to distribution, we have full control over our global supply chain.

### RISK-FREE CONVERSION

With our years of cleanroom glove experience, HALYARD\* can provide all the support you need to easily convert from your current glove to **PUREZERO\*** Cleanroom Gloves, including:

- **Technical documentation**
- **Validation data**
- **Product knowledge and expertise**

We also have the manufacturing capacity to assure you a reliable glove supply going forward.

To trial HALYARD\* **PUREZERO\*** Cleanroom Gloves, contact your Cleanroom Distributor today, or email us at [info@hyh.com](mailto:info@hyh.com).



# PUREZERO\*

## Cleanroom Nitrile Gloves

# PUREZERO\* CLEANROOM GLOVE PORTFOLIO

HALYARD\* offers an accelerator-free<sup>1</sup> portfolio of three non-sterile and two sterile cleanroom gloves to address the needs of pharmaceutical, medical device, microelectronics and semi-conductor manufacturing industries.

### NON-STERILE

## HALYARD\* PUREZERO\* HG3 WHITE NITRILE GLOVES

PUREZERO\* HG3 White Nitrile Cleanroom Gloves are non-sterile, ambidextrous, and 12 inches long with a high tack/grip surface and feature a beaded cuff to aid in donning and help prevent roll down.



### Physical Properties

AQL	1.0
Non-Sterile	✓
Ambidextrous	✓
Tacky Grip	✓
Textured Fingertips	✓
Accelerator-Free <sup>1</sup>	✓
Static Dissipative in Use <sup>2</sup>	✓
Low Dermatitis Potential	✓
Latex-Free	✓
Powder-Free	✓
Silicone-Free	✓
Tensile Strength <sup>3</sup>	20 MPa (Target)
Ultimate Elongation <sup>3</sup>	600%
Shelf Life	5 Years

### Cleanliness Properties

Max Particle Count	>0.5µm / cm <sup>2</sup> <950	IEST RP-CC005
Ionic Content (Extractable ions)	Max Level (µg/g)	IEST RP-CC005
Calcium	50	
Chloride	35	
Magnesium	5	
Nitrate	20	
Potassium	5	
Sodium	10	
Sulfate	10	
Zinc	25	
Ammonium	5	

For use in ISO Class 3 or higher, Grade A/B/C/D

**TACKY GRIP  
TEXTURED FINGERTIPS**

### Ordering Information

VWR Item Number	Size	Code
76540-258	XS	CLN3031XS
76540-254	SM	CLN3031SM
76540-252	MD	CLN3031MD
76540-250	LG	CLN3031LG
76540-256	XL	CLN3031XL

## HALYARD\* PUREZERO\* HG3 LIGHT BLUE NITRILE GLOVES

PUREZERO\* HG3 Light Blue Nitrile Cleanroom Gloves are non-sterile, ambidextrous, and 12 inches long with a high tack/grip surface and feature a beaded cuff to aid in donning and help prevent roll down.



### Physical Properties

AQL	1.0
Non-Sterile	✓
Ambidextrous	✓
Tacky Grip	✓
Textured Fingertips	✓
Accelerator-Free <sup>1</sup>	✓
Static Dissipative in Use <sup>2</sup>	✓
Low Dermatitis Potential	✓
Latex-Free	✓
Powder-Free	✓
Silicone-Free	✓
Tensile Strength <sup>3</sup>	20 MPa (Target)
Ultimate Elongation <sup>3</sup>	600%
Shelf Life	5 Years

### Cleanliness Properties

Max Particle Count	>0.5µm / cm <sup>2</sup> <1200	IEST RP-CC005
Ionic Content (Extractable ions)	Max Level (µg/g)	IEST RP-CC005
Calcium	50	
Chloride	35	
Magnesium	5	
Nitrate	20	
Potassium	5	
Sodium	10	
Sulfate	10	
Zinc	25	
Ammonium	5	

For use in ISO Class 3 or higher, Grade A/B/C/D

**TACKY GRIP  
TEXTURED FINGERTIPS**

### Ordering Information

VWR Item Number	Size	Code
76540-294	XS	CLN9031XS
76540-290	SM	CLN9031SM
76540-288	MD	CLN9031MD
76540-286	LG	CLN9031LG
76540-292	XL	CLN9031XL

# PUREZERO\*

## Cleanroom Nitrile Gloves

NON-STERILE (Continued)

### HALYARD\* PUREZERO\* HG3 WHITE SGX\* NITRILE GLOVES

PUREZERO\* HG3 WHITE SGX\* Nitrile Cleanroom Gloves with SMOOTH GRIP TECHNOLOGY\* are non-sterile, ambidextrous, and 12 inches long and feature a beaded cuff to aid in donning and help prevent roll down.



#### Physical Properties

AQL	1.0
Non-Sterile	✓
Ambidextrous	✓
Smooth Grip	✓
Textured Fingertips	✓
Accelerator-Free <sup>1</sup>	✓
Static Dissipative in Use <sup>2</sup>	✓
Low Dermatitis Potential	✓
Latex-Free	✓
Powder-Free	✓
Silicone-Free	✓
Tensile Strength <sup>3</sup>	20 MPa (Target)
Ultimate Elongation <sup>3</sup>	600%
Shelf Life	5 Years

#### Cleanliness Properties

Max Particle Count	>0.5µm / cm <sup>2</sup> <950	IEST RP-CC005
Ionic Content (Extractable ions)	Max Level (µg/g)	IEST RP-CC005
Calcium	50	
Chloride	35	
Magnesium	5	
Nitrate	20	
Potassium	5	
Sodium	10	
Sulfate	10	
Zinc	25	
Ammonium	5	

For use in ISO Class 3 or higher, Grade A/B/C/D

**SMOOTH GRIP  
TEXTURED FINGERTIPS**

#### Ordering Information

VWR Item Number	Size	Code
<b>76540-268</b>	XS	CLN3231XS
<b>76540-264</b>	SM	CLN3231SM
<b>76540-262</b>	MD	CLN3231MD
<b>76540-260</b>	LG	CLN3231LG
<b>76540-256</b>	XL	CLN3231XL



# PUREZERO\*

## Sterile Cleanroom Nitrile Gloves

### STERILE

### HALYARD\* PUREZERO\* HG3 LIGHT BLUE STERILE NITRILE GLOVES

PUREZERO\* HG3 Light Blue Sterile Nitrile Cleanroom Gloves have a hand specific shape, 4-mil fingertip thickness, 12-inch length with a smooth grip and a beaded cuff to aid in donning and help prevent roll down.



#### Physical Properties

AQL	1.0
Sterile	✓
Hand Specific Pairs	✓
Smooth Grip	✓
Textured Fingertips and Palms	✓
Accelerator-Free <sup>1</sup>	✓
Static Dissipative in Use <sup>2</sup>	✓
Low Dermatitis Potential	✓
Latex-Free	✓
Powder-Free	✓
Silicone-Free	✓
Tensile Strength <sup>3</sup>	20 MPa (Target)
Ultimate Elongation <sup>3</sup>	600%
Sterility Assurance Level (SAL)	10 <sup>-6</sup>
Shelf Life	5 Years

#### Cleanliness Properties

Max Particle Count	>0.5µm / cm <sup>2</sup>	<1200	IEST RP-CC005
Max Endotoxin Level		<20 EU	
Ionic Content (Extractable ions)	Max Level (µg/g)		IEST RP-CC005
Calcium		50	
Chloride		35	
Magnesium		5	
Nitrate		20	
Potassium		5	
Sodium		10	
Sulfate		10	
Zinc		25	
Ammonium		5	

For use in ISO Class 3 or higher, Grade A/B/C/D

**SMOOTH GRIP  
TEXTURED FINGERTIPS  
AND PALMS  
SAL 10<sup>-6</sup>**

#### Ordering Information

VWR Item Number	Size	Code
76540-298	6.0	CLN923260
76540-300	6.5	CLN923265
76540-302	7.0	CLN923270
76540-304	7.5	CLN923275
76540-306	8.0	CLN923280
76540-308	8.5	CLN923285
76540-310	9.0	CLN923290
76540-296	10.0	CLN923210

### HALYARD\* PUREZERO\* HG3 WHITE STERILE NITRILE GLOVES

PUREZERO\* HG3 White Sterile Nitrile Cleanroom Gloves have a hand specific shape, 6-mil fingertip thickness, 12-inch length with a smooth grip, and beaded cuff to aid in donning and help prevent roll down.



#### Physical Properties

AQL	1.0
Sterile	✓
Hand Specific Pairs	✓
Smooth Grip	✓
Textured Fingertips and Palms	✓
Accelerator-Free <sup>1</sup>	✓
Static Dissipative in Use <sup>2</sup>	✓
Low Dermatitis Potential	✓
Latex-Free	✓
Powder-Free	✓
Silicone-Free	✓
Tensile Strength <sup>3</sup>	20 MPa (Target)
Ultimate Elongation <sup>3</sup>	600%
Sterility Assurance Level (SAL)	10 <sup>-6</sup>
Shelf Life	5 Years

#### Cleanliness Properties

Max Particle Count	>0.5µm / cm <sup>2</sup>	<950	IEST RP-CC005
Max Endotoxin Level		<20 EU	
Ionic Content (Extractable ions)	Max Level (µg/g)		IEST RP-CC005
Calcium		50	
Chloride		35	
Magnesium		5	
Nitrate		20	
Potassium		5	
Sodium		10	
Sulfate		10	
Zinc		25	
Ammonium		5	

For use in ISO Class 3 or higher, Grade A/B/C/D

**SMOOTH GRIP  
TEXTURED FINGERTIPS  
AND PALMS  
SAL 10<sup>-6</sup>**

#### Ordering Information

VWR Item Number	Size	Code
76540-272	6.0	CLN323260
76540-274	6.5	CLN323265
76540-276	7.0	CLN323270
76540-278	7.5	CLN323275
76540-280	8.0	CLN323280
76540-282	8.5	CLN323285
76540-284	9.0	CLN323290
76540-270	10.0	CLN323210

# PUREZERO\*

## Non-Sterile Cleanroom Gloves

### ADDED PROTECTION FROM THE RISK OF CHEMICAL EXPOSURE

It's critical to protect staff from exposure to potentially hazardous chemicals and chemotherapy drugs. In addition to providing a barrier to chemical splash, microorganisms and viruses, **PUREZERO\*** Cleanroom Gloves are **now tested against 29 chemicals and 14 chemotherapy drugs**.

### CHEMOTHERAPY DRUG RESISTANCE GUIDE<sup>4</sup>

Chemotherapy Agent (Concentration in ppm)	HALYARD* <b>PUREZERO*</b> HG3 White SGX* Nitrile Gloves		HALYARD* <b>PUREZERO*</b> HG3 White Nitrile Gloves		HALYARD* <b>PUREZERO*</b> HG3 Light Blue Nitrile Gloves	
	Minimum Break-through Time (minutes)	Permeation Rate ( $\mu\text{g}/\text{cm}^2/\text{min}$ )	Minimum Break-through Time (minutes)	Permeation Rate ( $\mu\text{g}/\text{cm}^2/\text{min}$ )	Minimum Break-through Time (minutes)	Permeation Rate ( $\mu\text{g}/\text{cm}^2/\text{min}$ )
Carmustine (BCNU) (3,300)	18.1	0.09	16.4	0.5	24.2	0.6
Cisplatin (1,000)	>240	N/A	>240	N/A	>240	N/A
Cyclophosphamide (20,000)	>240	N/A	>240	N/A	>240	N/A
Dacarbazine (10,000)	>240	N/A	>240	N/A	>240	N/A
Doxorubicin HCL (2,000)	>240	N/A	>240	N/A	>240	N/A
Etoposide (20,000)	>240	N/A	>240	N/A	>240	N/A
Fluorouracil (50,000)	>240	N/A	>240	N/A	>240	N/A
Ifosfamide (50,000)	>240	N/A	>240	N/A	>240	N/A
Methotrexate (25,000)	>240	N/A	>240	N/A	>240	N/A
Mitomycin C (500)	>240	N/A	>240	N/A	>240	N/A
Mitoxantrone (2,000)	>240	N/A	>240	N/A	>240	N/A
Paclitaxel (6,000)	>240	N/A	>240	N/A	>240	N/A
Thiotepa (10,000)	89.3	0.01	88.8	0.1	48.2	0.4
Vincristine (1,000)	>240	N/A	>240	N/A	>240	N/A

Use the rating system below to determine the chemotherapy compatibility for exposure:

<10	Not recommended for use - breakthrough can occur in less than 10 minutes.
11 - 239	Use with caution - breakthrough can occur between 11 and 239 minutes.
>240	Recommended for protection - no breakthrough up to 240 minutes.
N/A	The chemotherapy drug did not reach the minimum permeation rate (0.01 $\mu\text{g}/\text{cm}^2/\text{min}$ ) as defined within ASTM D6978.

**CAUTION:** It's the user's responsibility to determine the applicability of these gloves for their intended use with chemotherapy drugs.

### DEFINITION OF TERMS

**Breakthrough time:** The time required for the test chemical to be detected on the inside of the glove. Essentially, this is the amount of time that the glove can resist a chemical when the glove is fully immersed in the chemical.

**Permeation:** The process where chemicals, such as liquids, gases and vapors can pass through a glove film (or other PPE interfaces) without penetrating directly through a pinhole, tear or other visible opening.

**Permeation rate:** The flowrate of the chemical after the chemical breaks through the inside of the glove. It is measured in amount per surface area of the glove per time ( $\mu\text{g}/\text{cm}^2/\text{min}$ ).

Contact your Sales Representative for additional chemical and chemotherapy drug testing information.



# Non-Sterile Cleanroom Gloves

## CHEMICAL RESISTANCE GUIDE<sup>5</sup>

Chemical (Concentration %)	HALYARD* PUREZERO* HG3 White SGX* Nitrile Gloves		HALYARD* PUREZERO HG3 White Nitrile Gloves		HALYARD* PUREZERO HG3 Light Blue Nitrile Gloves	
	Minimum Break-through Time (minutes)	Permeation Rate (µg/cm <sup>2</sup> /min)	Minimum Break-through Time (minutes)	Permeation Rate (µg/cm <sup>2</sup> /min)	Minimum Break-through Time (minutes)	Permeation Rate (µg/cm <sup>2</sup> /min)
1-Butanol (99)	>480	0.5	42.5	1.80E+01	26.4	2.40E+01
Acrylamide (40)	>480	0.03	>480	0.1	>480	0.2
Chloroform (70)	0	–	0	–	0	–
Citric Acid (70)	>480	<1.0	>480	<1.0	>480	<1.0
Citric Acid Monohydrate (30)	>480	N/A	>480	N/A	>480	N/A
Cyclohexane (99.7)	262	1.8	50.9	–	32.5	3.60E+01
Dimethylformamide (99)	0	–	0	–	0	–
Dimethyl Sulfoxide (99)	10.1	10.3	10	–	5	–
Ethanol (70)	37.6	7.6	42.2	12.5	30.6	7.6
Ethyl Alcohol (99)	18.9	6.60E+01	27.7	4.80E+01	10.4	5.50E+01
Ethidium Bromide (1)	>480	N/A	>480	N/A	>480	N/A
Formaldehyde (37)	>480	N/A	>480	5.50E-03	>480	1.50E-02
Glutaraldehyde (50)	>480	N/A	>480	N/A	>480	N/A
Hydrazine Monohydrate (55)	>480	N/A	>480	0.1	429.4	2.6
Hydrochloric Acid (30)	>480	N/A	>480	N/A	>480	N/A
Hydrogen Peroxide (30)	35.5	0.7	>480	0.7	43	1.4
Isopropyl Alcohol (70)	197.3	1.2	119.5	3.1	71.8	2.2
Isopropyl Alcohol (99)	75.4	4.1	72.1	5.4	38.6	7.1
Klericide 70/30 IPA (N/A)	179.6	3.9	91.8	4.6	47.5	5.4
Klericide Neutral Detergent (N/A)	>480	N/A	>480	N/A	>480	N/A
Klericide Sporicidal Active Chlorine (N/A)	>480	N/A	>480	N/A	>480	N/A
Methanol (99)	13.5	55.2	10.5	–	10.4	–
Nitric Acid (65)	31.7	4.40E+04	25	1.70E+04	10.1	3.70E+05
Peracetic Acid (5)	>480	N/A	>480	N/A	>480	N/A
Phosphoric Acid (70)	>480	<1.0	>480	<1.0	>480	<1.0
Sodium Hydroxide (50)	>480	N/A	>480	N/A	>480	N/A
Sodium Hypochlorite (10-13%)	>480	N/A	>480	N/A	>480	N/A
Spor-Klenz (N/A)	>480	N/A	>480	N/A	>480	N/A
Sulfuric Acid (50)	>480	N/A	>480	N/A	>480	N/A

Use the rating system below to determine the chemical compatibility for exposure:

<10	Not recommended for use - breakthrough can occur in less than 10 minutes.
11 - 479	Use with caution - breakthrough can occur between 11 and 479 minutes.
>480	Permeation breakthrough is excellent. Permeation does not occur during the test (8 hours).
N/A	The chemical did not reach the minimum permeation rate (1 µg/cm <sup>2</sup> /min) as defined within EN 16523-1. There is a possibility for trace amounts of the chemical to permeate through the glove.
–	The permeation rate was beyond the range of the detection instruments. The permeation of the chemical through the glove film may be too high for the detector to reach a steady-state reading.

CAUTION: It's the user's responsibility to determine the applicability of these gloves for their intended use.

# PUREZERO\*

## Sterile Cleanroom Gloves

### ADDED PROTECTION FROM THE RISK OF CHEMICAL EXPOSURE

It's critical to protect staff from exposure to potentially hazardous chemicals and chemotherapy drugs. In addition to providing a barrier to chemical splash, microorganisms and viruses, **PUREZERO\*** Cleanroom Gloves are **now tested against 29 chemicals and 14 chemotherapy drugs**.

### CHEMOTHERAPY DRUG RESISTANCE GUIDE<sup>4</sup>

Chemotherapy Agent (Concentration in ppm)	HALYARD* <b>PUREZERO*</b> HG3 Light Blue Sterile Nitrile Gloves		HALYARD* <b>PUREZERO*</b> HG3 White Sterile Nitrile Gloves	
	Minimum Breakthrough Time (minutes)	Permeation Rate ( $\mu\text{g}/\text{cm}^2/\text{min}$ )	Minimum Breakthrough Time (minutes)	Permeation Rate ( $\mu\text{g}/\text{cm}^2/\text{min}$ )
Carmustine (BCNU) 3.3	87.9	0.04	99	0.02
Cisplatin 1.0	>240	N/A	>240	N/A
Cyclophosphamide 20.0	>240	N/A	>240	N/A
Dacarbazine 10.0	>240	N/A	>240	N/A
Doxorubicin HCL 2.0	>240	N/A	>240	N/A
Etoposide 20.0	>240	N/A	>240	N/A
Fluorouracil 50.0	>240	N/A	>240	N/A
Ifosfamide 50.0	>240	N/A	>240	N/A
Methotrexate 25.0	>240	N/A	>240	N/A
Mitomycin C 0.5	>240	N/A	>240	N/A
Mitoxantrone 2.0	>240	N/A	>240	N/A
Paclitaxel 6.0	>240	N/A	>240	N/A
Thiotepa 10.0	109.1	0.02	179.8	0.03
Vincristine 1.0	>240	N/A	>240	N/A

Use the rating system below to determine the chemotherapy compatibility for exposure:

<10	Not recommended for use - breakthrough can occur in less than 10 minutes.
11 to 239	Use with caution - breakthrough can occur between 11 and 239 minutes.
>240	Recommended for protection - no breakthrough up to 240 minutes.
N/A	The chemotherapy drug did not reach the minimum permeation rate ( $0.01 \mu\text{g}/\text{cm}^2/\text{min}$ ) as defined within ASTM D6978.

CAUTION: It's the user's responsibility to determine the applicability of these gloves for their intended use with chemotherapy drugs.

#### DEFINITION OF TERMS

**Breakthrough time:** The time required for the test chemical to be detected on the inside of the glove. Essentially, this is the amount of time that the glove can resist a chemical when the glove is fully immersed in the chemical.

**Permeation:** The process where chemicals, such as liquids, gases and vapors can pass through a glove film (or other PPE interfaces) without penetrating directly through a pinhole, tear or other visible opening.

**Permeation rate:** The flowrate of the chemical after the chemical breaks through the inside of the glove. It is measured in amount per surface area of the glove per time ( $\mu\text{g}/\text{cm}^2/\text{min}$ ).

Contact your Sales Representative for additional chemical and chemotherapy drug testing information.

# Sterile Cleanroom Gloves

## CHEMICAL RESISTANCE GUIDE<sup>5</sup>

Chemical (Concentration %)	HALYARD* PUREZERO* HG3 Light Blue Sterile Nitrile Gloves		HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves	
	Minimum Breakthrough Time (minutes)	Permeation Rate ( $\mu\text{g}/\text{cm}^2/\text{min}$ )	Minimum Breakthrough Time (minutes)	Permeation Rate ( $\mu\text{g}/\text{cm}^2/\text{min}$ )
1-Butanol (99)	192.1	1.2	179	3.2
Acrylamide (40)	>480	0.07	>480	0.01
Chloroform (70)	0	–	0	–
Citric Acid (70)	>480	<1.0	>480	<1.0
Citric Acid Monohydrate (30)	>480	N/A	>480	N/A
Cyclohexane (99.7)	52.5	9.6	>480	0.8
Dimethylformamide (99)	0	–	0	–
Dimethyl Sulfoxide (99)	5.5	–	10.6	–
Ethanol (70)	27.6	16	43.8	11.6
Ethyl Alcohol (99)	18.7	5.20E+01	32.1	73.8
Ethidium Bromide (1)	>480	N/A	>480	N/A
Formaldehyde (37)	>480	N/A	>480	N/A
Glutaraldehyde (50)	>480	N/A	>480	N/A
Hydrazine Monohydrate (55)	>480	0.08	>480	N/A
Hydrochloric Acid (30)	>480	N/A	>480	N/A
Hydrogen Peroxide (30)	36	1.4	78.7	0.8
Isopropyl Alcohol (70)	194	1.7	185	2.6
Isopropyl Alcohol (99)	361	1.2	280.2	1.4
Klericide 70/30 IPA (N/A)	141	2	163.7	2.2
Klericide Neutral Detergent (N/A)	>480	N/A	>480	N/A
Klericide Sporicidal Active Chlorine (N/A)	>480	N/A	>480	N/A
Methanol (99)	1.2	57.6	9	50.7
Nitric Acid (65)	15	8.90E+04	25.4	3.60E+04
Peracetic Acid (5)	>480	N/A	>480	N/A
Phosphoric Acid (70)	>480	<1.0	>480	<1.0
Sodium Hydroxide (50)	>480	N/A	>480	N/A
Sodium Hypochlorite (10-13%)	>480	N/A	>480	N/A
Spor-Klenz (N/A)	>480	0.0043	>480	N/A
Sulfuric Acid (50)	>480	N/A	>480	N/A

Use the rating system below to determine the chemical compatibility for exposure:

<10	Not recommended for use - breakthrough can occur in less than 10 minutes.
11 - 479	Use with caution - breakthrough can occur between 11 and 479 minutes.
>480	Permeation breakthrough is excellent. Permeation does not occur during the test (8 hours).
N/A	The chemical did not reach the minimum permeation rate (1 $\mu\text{g}/\text{cm}^2/\text{min}$ ) as defined within EN 16523-1. There is a possibility for trace amounts of the chemical to permeate through the glove.
–	The permeation rate was beyond the range of the detection instruments. The permeation of the chemical through the glove film may be too high for the detector to reach a steady-state reading.

**CAUTION:** It's the user's responsibility to determine the applicability of these gloves for their intended use. Always factor in the physical performance requirements of the job or application when selecting a glove that is used with chemicals.

# GLOVE SELECTION GUIDE

	Description	Designed for	Max Particle Count	ISO Class	Finish	Fingertips	Double Donning	Size Range	Fingertip Thickness	Case Count
NON-STERILE	HALYARD* PUREZERO* HG3 White Nitrile Gloves	Semiconductor, Pharmaceutical, Medical Device Manufacturing	<950	ISO Class 3 or higher and Grade A/B/C/D cleanrooms	Tacky Grip	Textured Fingertips	Recommended for Outer Glove	XS-XL	.16mm (6 mil)	1000/cs Ambidextrous
	HALYARD* PUREZERO* HG3 Light Blue Nitrile Gloves	Semiconductor, Pharmaceutical, Medical Device Manufacturing	<1200	ISO Class 3 or higher and Grade A/B/C/D cleanrooms	Tacky Grip	Textured Fingertips	Recommended for Outer Glove	XS-XL	.10mm (4 mil)	1500/cs Ambidextrous
	HALYARD* PUREZERO* HG3 White SGX* Nitrile Gloves	Semiconductor, Pharmaceutical, Medical Device Manufacturing	<950	ISO Class 3 or higher and Grade A/B/C/D cleanrooms	Smooth Grip	Textured Fingertips	Outer or Under	XS-XL	.16mm (6 mil)	1000/cs Ambidextrous
STERILE	HALYARD* PUREZERO* HG3 Light Blue Sterile Nitrile Gloves	Pharmaceutical, Biotechnology, Sterile Compounding, Aseptic Processing	<1200	ISO Class 3 or higher and Grade A/B/C/D cleanrooms	Smooth Grip	Textured Fingertips and Palms	Outer or Under	6.0 6.5 7.0 7.5 8.0 8.5 9.0 10.0	.10mm (4 mil)	300 pairs/cs Hand Specific
	HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves	Pharmaceutical, Biotechnology, Sterile Compounding, Aseptic Processing	<950	ISO Class 3 or higher and Grade A/B/C/D cleanrooms	Smooth Grip	Textured Fingertips and Palms	Outer or Under	6.0 6.5 7.0 7.5 8.0 8.5 9.0 10.0	.16mm (6 mil)	200 pairs/cs Hand Specific
Applies to all PUREZERO* Gloves:		Accelerator-Free <sup>1</sup> Static Dissipative in Use <sup>2</sup> Low Dermatitis Potential Compliant with the REACH regulation	AQL 1.0	CE 2797 (PPE Cat. III)	ISO 374-5:2016 VIRUS	ISO 374-1:2016/Type C K-Low Chemical				

1 Not formulated with these commonly used vulcanizing chemicals: Sulfur, Thiurams, Thioxoles, Guanidines and Carbamates.  
 2 Tested against ANSI SP 15.1 and EN 1149 (Protective Clothing - electrostatic properties)  
 3 Tested per ASTM D6319, EN 455-2  
 4 Tested per ASTM D6978, Standard Practice Assessment of Resistance of Medical Gloves to Permeation by Chemotherapy Drugs. The testing conditions used are intended to approximate the worst case conditions for use. Testing was conducted on a single layer glove material.  
 5 Gloves tested for chemical resistance per EN 16523-1. This European Standard specifies a test method for the determination of the resistance of protective clothing, gloves and footwear materials to permeation by potential hazardous liquid chemicals under the condition of continuous contact. The testing conditions used are intended to approximate the worst case conditions for use. Testing was conducted on a single layer glove material.

avantor™  
 delivered by **VWR™**
VWR.COM

Prices, product, and/or services details are current when published and subject to change without notice. | Certain products or services may be limited by federal, state, provincial, or local regulations. | VWR, part of Avantor, makes no claims or warranties concerning sustainable/green products. Any claims concerning sustainable/green products are the sole claims of the manufacturer and not those of VWR International, LLC and/or Avantor, Inc. or affiliates. All prices are in Canadian dollars unless otherwise noted. Offers valid in Canada, void where prohibited by law or company policy, while supplies last. | Trademarks are owned by Avantor, Inc. or its affiliates, unless otherwise noted. | Visit [vwr.com](http://vwr.com) to view our privacy policy, trademark owners, and additional disclaimers. © 2022 Avantor, Inc. All rights reserved.

0722 Lit. No. 080098W



HALYARD\* is an Owens & Minor brand

\*Registered Trademark or Trademark of O&M Halyard or its affiliates. © 2021, 2022. All rights reserved. 008427 COPY-04230 June 2022