

SHAPE™



The Shape™ safety faceshield is compact, comfortable and lightweight.
Its moulded Polycarbonate visor provides a superior optical quality with an exceptional field of vision.

WEIGHT

370g

FEATURES

- Perfect optical quality
- Wide field of vision
- Adjustable headband
- Compatible with prescription glasses



+ DESIGN



REPLACEMENT VISOR

4SHA2GEN20C



4SHA20C



SHAPE 2™

NEW

Reference	Lens Markings	Frame Markings	Lens Treatment	Conformity
4SHA20C	2-1,2 1 BT 9 CE	EN 166 9 BT CE	N/A	EN 166 EN 170
5SHA20C	2-1,2 1 BT 9 CE	EN 166 9 BT CE	N/A	EN 166 EN 170

For Lens & frames markings details, please refer to pages 7 to 9 in Swiss one catalogue.
For Lens technologies and colors details please refer to pages 10 to 12 in Swiss one catalogue.

Swiss One Safety, OX29 OTA UK - Technical helpline: +44(0)1993 826051 - email: technical@swissonesafety.net

SHAPE™



DIMENSIONS OF SPECTACLE

Lens Thickness:	2.2mm
Lens Base:	
Lens Size (Diagonal):	N/A
Bridge:	N/A
Temple Length (Lens to tip):	N/A
Overall Width:	N/A
Closest point between temple tips:	N/A



1 Polycarbonate

INSTRUCTIONS FOR USE

- In use ensure that the safety spectacles fit comfortably and securely on the head
- Ensure that the safety spectacles are in place, before entering the hazard area

CLEANING & MAINTENANCE

- The safety spectacles may be cleaned with soap and warm water and dried with a soft cloth
- Do not clean with chemical or abrasive cleaners
- The eye shield should be stored out of direct sunlight, away from chemicals and not exposed to extremes of temperature

LIMITATIONS OF USE

- Protection will only be offered if the safety spectacles are fitted correctly
- If the safety spectacles become scratched or damaged they should be replaced, likewise if the safety spectacles are subjected to severe impact they should be replaced immediately
- Do not apply paint, solvents, adhesives or self-adhesive labels, except in accordance with instructions from the manufacturer
- The safety spectacles, when in contact with the skin may cause allergic reactions to susceptible individuals. If this occurs leave the hazard area, remove the eye shield and seek medical advice
- The attention of users is also drawn to the dangers of modifying or removing any of the original component parts, other than as recommended by the manufacturer
- Shape™ is not suitable for protection against dusts, liquids or molten metals

DIMENSIONS OF INNER PACKAGING

Quantity:	-
Weight:	-kg




H Height: 96mm

L Length: 191mm

W Width: 284mm

DIMENSIONS OF OUTER PACKAGING

Quantity:	10
(xx display boxes of xx p)	
Weight: (Approx.)	5kg

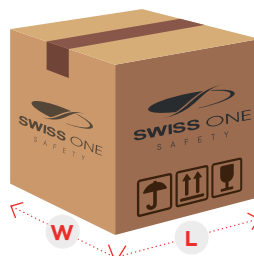

H Height: 57mm

L Length: 50mm

W Width: 34mm

Reference	EAN barcode Unit	EAN barcode inner packaging	EAN barcode outer packaging	Country of origin
4SHA20C	5038428302111	5038428302128	5038428302135	Malaysia
5SHA20C	7640139971647	5038428301251	5038428288965	Malaysia