

STERAMIST™

STERAPAK®

PORTABLE CORDLESS DISINFECTION

OVERVIEW

The SteraPak delivers patented ionized Hydrogen Peroxide (iHP) technology in the most compact form. Featuring a custom backpack form for premium comfort, direct and battery-powered operation, and a smaller cartridge size, the SteraPak was designed to facilitate everything from disinfecting facility surfaces to isolated sites.

PRODUCT INFORMATION

The SteraPak features comfortable, highly-adjustable padded straps, compact 32 oz. BIT Solution cartridges, a rechargeable battery, and a streamlined interface that includes simple analog switches for powering on and off and selecting either priming or spraying modes.

As with every SteraMist unit, iHP technology ionizes BIT solution by passing through a cold plasma arc, simulating natural disinfection by creating a 360° mist of microscopic particles that kill on contact to deliver quick, six-log surface decontamination.

For more information, please visit steramist.com or call **800.525.1698**.

SPECIFICATIONS

(S-PAK)

OPERATION:

Efficacy: Six-log & Greater Reduction

Particle Size: Submicrons - 3µm

Application: 5 seconds per ft.²

HARDWARE:

Voltage: 110-230v or 12v Battery

Battery Runtime: 75 Minutes


Applicators: 1 (Integrated)

Cartridge Volume: 32 oz.

Weight: Approx. 16.2 lbs

Dimensions: 20.5 x 15 x 6.5 in.

Cord Length: 4ft.

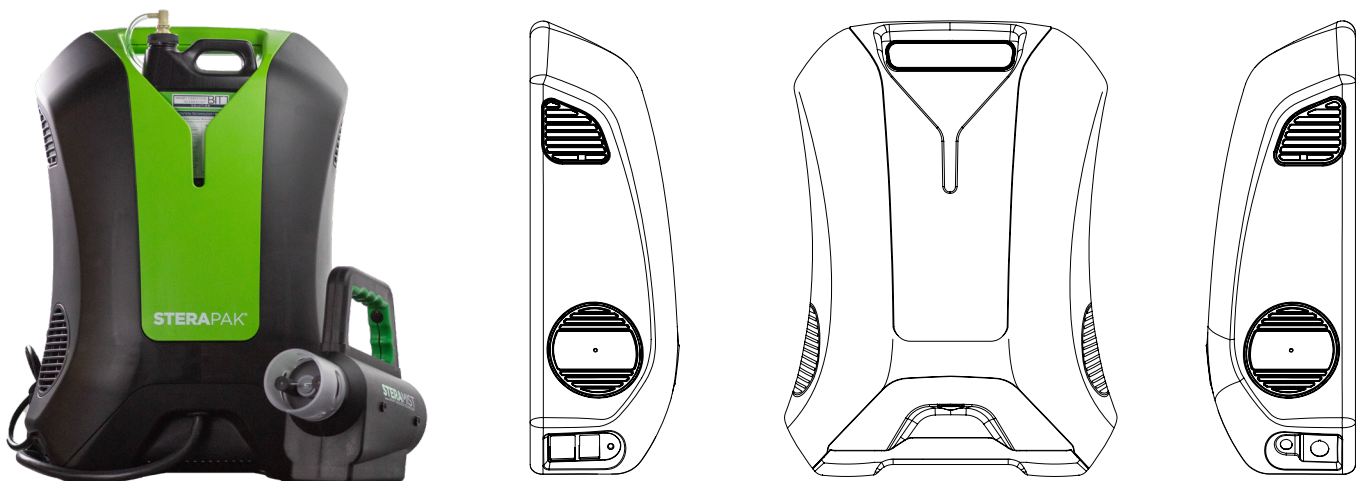

TOMI™ ENVIRONMENTAL SOLUTIONS CERTIFICATIONS/ACCREDITATIONS

ITAR Registered: M27110	ISO 9001:2015	DUNS: 809446599
SAM Registered	NAICS: 333413	FAR/DFAR Complaint
AWS/ASME Welders	SIC: 2860	DIBBS Registered
CE (European Certification)	UL Listed	EPA Registration: 90150-2
IFPS Certified (Hydraulic, Pneumatic, Connector, and Fluid Power Engineer)		
FDA Registration: 3012117386 (Disinfection, Medical Devices)		