


Eyesaver® Laboratory Widespread Faucet with Integrated Eyewash

SPECIFICATION

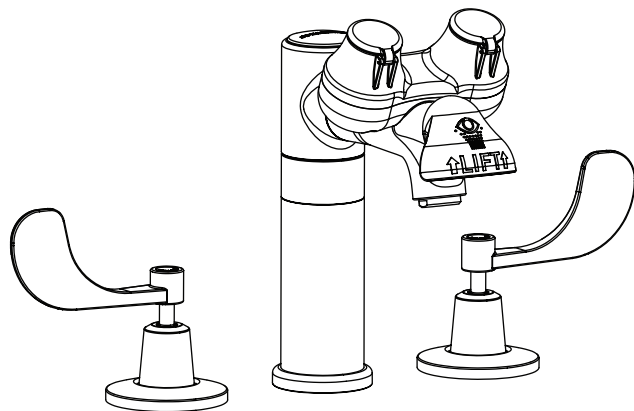

The Speakman SEF-1801 is a NSF 61 compliant widespread laboratory faucet with an integrated ANSI compliant aerated eyewash. Dedicated water ways allow the faucet and eyewash to work independently of each other.

EYEWASH FEATURES:

- Lift handle activator
- Dedicated water channel for eyewash
- Aerated plated spray outlets with flip-top dust caps
- 2 gpm (7.57 L/min) flow rate at 30 PSI
- Tepid water ready

FAUCET FEATURES:

- Lead-free brass construction
- ¼ turn ceramic cartridges
- Cross handles with color-coded indexes
- Swivel or rigid spout up to 100 degrees
- Widespread installation
- 1.5 gpm (5.7 L/min) flow rate

COMPLIANCE:

- Certified to ANSI Z358.1, ASME A112.18.1/CSA B125.1, NSF 61 & CA AB 1953

FINISHES:

ADD SUFFIX TO MODEL #

- Polished Chrome (standard)

OPTIONS:

- 8 in. deep gooseneck rigid or swivel ☐ -8
- 0.5 gpm vandal-resistant flow control outlet ☐ -BO
- Foot pedal activation (not CA AB1953 compliant) ☐ -FP
- 1.5 gpm laminar flow for faucet outlet ☐ -LF
- Non-aerated eyewash spray outlets and laminar flow control ☐ -NA
- Serrated tip with vacuum breaker (not CA AB1953 compliant) ☐ -ST
- Se-370 thermostatic mixing valve ☐ -TW
- Under-counter TMV (electronic only) for faucet temp. ☐ -TW

WARRANTY:

- 25 years for ceramic cartridges
- 3 year limited

SEE REVERSE FOR ROUGH-IN DIMENSIONS
PATENT PENDING

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL.

SPEAKMAN®

400 ANCHOR MILL ROAD | NEW CASTLE, DE 19720
P: 800-537-2107 | F: 800-977-2747
WWW.SPEAKMANCOMPANY.COM

REVISION DATE: JANUARY 2014




Management Systems
Registered to ISO 9001

SPEAKMAN®


Eyesaver® Laboratory Widespread Faucet with Integrated Eyewash SEF-1801

SPECIFICATION

FRONT VIEW

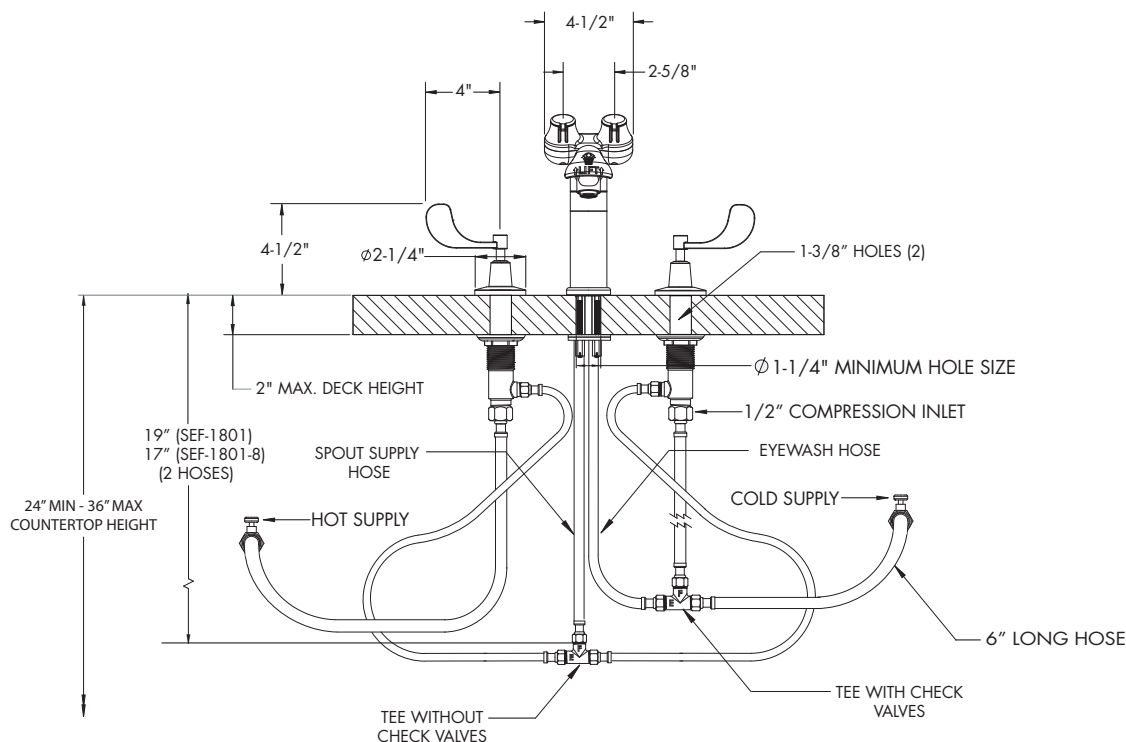

SEF-1801 SIDE VIEW (LESS HOSES)

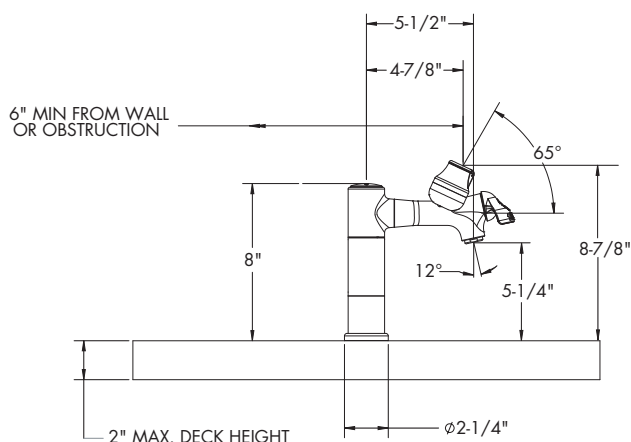

NOTE: 1. Unless otherwise specified, all inlets are 3/8" compression with female threads. 2. All dimensions are in inches (millimeters) unless otherwise specified and are subject to change without notice.

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL.

SPEAKMAN®

400 ANCHOR MILL ROAD | NEW CASTLE, DE 19720
P: 800-537-2107 | F: 800-977-2747
WWW.SPEAKMANCOMPANY.COM

REVISION DATE: JANUARY 2014



Management Systems
Registered to ISO 9001