

pronto100



The smallest, fastest, best quality
ID card printer in its class.



pronto100

Introducing the Magicard Pronto100

Do not underestimate its tiny frame. Designed from the ground up to be best in class: the powerful Pronto100 packs a mighty punch. With a focus on high speed, the highest quality and with the environment a key factor in every aspect of its design and manufacture, the Pronto100 has been developed to exceed the expectations of today's tech-savvy and connected consumer.

Bundled Magicard Design & Print software allows users to produce pin-sharp cards every time, while the CLIX Networked Monitoring user interface allows users to check dye film status, print a test card, set up a HoloKote and more.

The result? A 21st century printer that incorporates Magicard's decades of card printer experience at a price point appealing to all sectors and which is made to last in Great Britain.

Small footprint – Small but mighty, the Pronto100 proves that the best things come in small packages. With its small footprint and light weight, the Pronto100 will fit into offices large or small while also being ideal for the home worker.

High speed – Quick to set up, quick to operate and quick to deliver the best results. The Pronto100 offers the highest print speed in Magicard's smallest printer package available today.

- HD photo quality - 23 seconds per card
- Standard colour - 18 seconds per card
- Monochrome - 4.7 seconds per card

Quality – The Pronto100 packs a mighty punch delivering HD photo quality printing out of the box. Delivering photo-realistic colour reproduction, and with top-quality edge-to-edge printing guaranteed, your printed cards will never look so good.

Built-in simplicity – Despite its advanced features, the Pronto100 is no prima donna. Like all Magicard products, the Pronto100 has been designed to be low maintenance and has been built with the best quality materials in a world-class manufacturing facility. The Pronto100 will therefore require only limited support: users do not need a doctorate to use this printer.



Printer features

Standard

 VISUAL SECURITY HoloKote®	 High speed print	 Optimised colour profiles
 3 Years parts and labour warranty	 ABC Rewritable	 clix Networked monitoring
 Edge to edge	 Digital shredding	 Small footprint
 Ethernet	 Threat benchmarked	 Design & print software

Optional



Warranty**



The Pronto100 is backed by a 3 year limited warranty** which includes direct access to the global Magicard technical support team.

**Available in the UK, EU, North America and other selected territories. Covers poor workmanship, manufacturing defects and component failure - conditional with use of approved Magicard consumables and observance of correct routine maintenance and frequency.




Security built in

Digital shredding™ - once data has been used for the print job, it is fragmented, rendering it irrecoverable, helping to ensure the Pronto100 is not a repository for data.

Threat benchmarked - we run security scans against the comprehensive vulnerability assessment tool, Nessus Pro, one of the most widely deployed security technologies in the world and push regular updates to the device, ensuring that the printer software and associated system configuration conform to the highest levels of security.

Anti-fraud - the Pronto100 gives the option to print one of 3 standard HoloKote watermarks on every card.

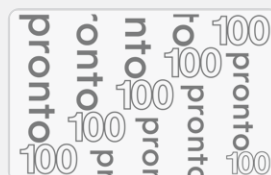

pronto100

● Standard ● Option

Printer specifications

Print speed*	
HD photo quality colour	Up to 157 cards per hour
High speed colour	Up to 200 cards per hour
Monochrome	Up to 766 cards per hour
Card capacities	
Card input	50
Card output	50
Visual security	
Standard HoloKote watermark (x3)	●
HoloPatch cards	●
Electronic security	
N/A	
Warranty**	
3-year MagiCover Limited Warranty	
Print technology	
Dye sublimation/rewritable	
Feed system	
Manual/automatic	
Upgrade	
N/A	
Connectivity	
USB	●
Ethernet	●
Compatibility	
Windows 11: 21H2, 22H2.	
Windows 10: 21H1, 21H2, 22H2 (32 and 64 bit).	
Windows Server: 2022, 2019 (1809), 2016 (1607).	
macOS latest version, Linux with CUPS support.	
Dimensions	
180 W x 208 H x 255 D mm / 7 W x 8.2 H x 10 D inches	
Weight	
2.9kg / 6.3lbs	
Operating environment	
Sheltered office - 10°C - 30°C / 50°F - 85°F	

Consumables

Dye film		Part No.
Pronto100 YMCKO dye film 100 images		MD100YMCKO/2
Pronto100 YMCKO dye film 100 images		MD100YMCKO/3
Card types/thickness		
CR80/CR79 PVC ISO blank cards, rewritable and HoloPatch® cards. 0.50mm to 1.00mm / 0.020" to 0.040".		
Cleaning supplies		
Cleaning Card		E9310
Cleaning Kit - 10 cleaning cards, 1 pen		E9100

Variants

	Part No.
Pronto100	3100-0001/2*
Pronto100	3100-0001/3*

(* Region codes; /2 - USA; /3 - Europe, Japan, South Korea and Australasia)

*Print speeds are approximate and depend on card design/print settings. **Available in North America, EU and other selected territories. Elsewhere a minimum of 1 year limited depot warranty. Our warranties cover poor workmanship, manufacturing defects and component failure – conditional with use of approved MagiCard consumables and observance of correct routine maintenance and frequency.



Warranty subject to the observance of specific conditions of use and maintenance, as well as the use of certified 'Original MagiCard' dye films.

MagiCard is a registered trademark of MagiCard Ltd. All other trademarks, brand names, or product names belong to their respective holders.

The information contained in this document reflects the current state of design and we reserve the right to change the specification without notice or obligation.

 **MagiCard Ltd - Headquarters and manufacturing centre**
 Hampshire Road, Weymouth, Dorset DT4 9XD,
 United Kingdom
 Tel: +44 (0)1305 47 00 00
 Email: info@magicard.com
www.magicard.com
 20-11-2023
 © 2023 Brady Worldwide Inc. ALL RIGHTS RESERVED.



Y5595789

EUR-M-364-EN

Find your nearest
dealer here:



Issue: 2.00