


Medium CleanFoam® Swab with Long Handle

CleanFoam® Series



Actual Size

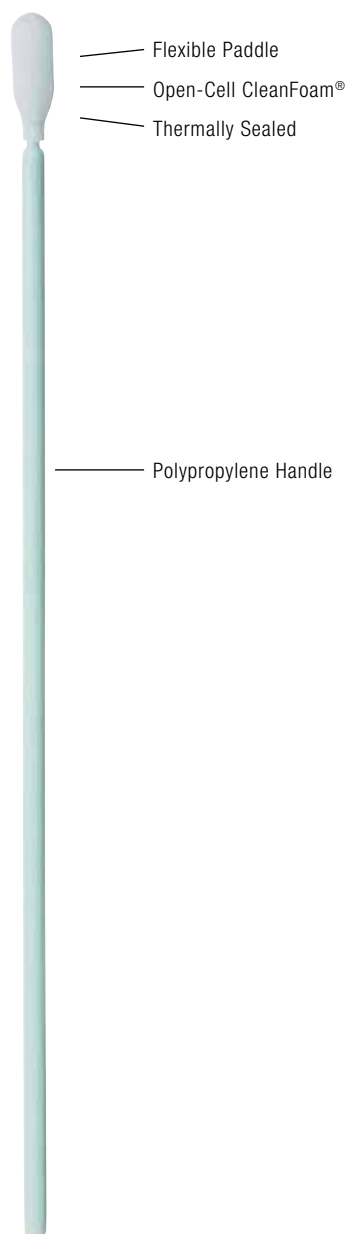

North America
1210 South Park Drive
Kernersville, NC 27284
Tel 336.996.7046
Fax 336.996.2297
www.texwipe.com
info@texwipe.com

Europe/Middle East
Saffierlaan 5
2132 VZ Hoofddorp
The Netherlands
Tel +31 88 1307 400
Fax +31 88 1307 499

Asia/Pacific
50 Tagore Lane
#02-01 Entrepreneur Centre
Singapore 787494
Tel +65 6468 9433
Fax +65 6468 6772

Description

The Medium CleanFoam® Swab with Long Handle is an excellent general-purpose swab for cleaning surfaces and hard-to-reach areas. Its laundered CleanFoam® head possesses excellent capacity and cushioning. A long handle and flexible internal head paddle provide good support. This swab can replace typical long-handled cotton swabs in applications requiring superior cleanliness.

Features

- Laundered polyurethane CleanFoam® head over flexible paddle
- 100 ppi open-cell structure
- Long, light green polypropylene handle
- Thermally bonded head
- Soft and nonabrasive

Benefits

- Low nonvolatile residue
- Low particle generation
- Excellent sorbency
- No contaminating adhesives
- Good chemical resistance

Applications

- Cleaning with solvents such as IPA
- Applying lubricants and other liquids
- Removing excess materials

Products

TX Number	Description	Packaging
TX740B	Medium CleanFoam® Swab with Long Handle	Bag-Within-A-Bag® 500 swabs/bag 5 inner bags of 100 swabs 5 bags/case

Medium CleanFoam® Swab with Long Handle

Physical Characteristics

Head material	100 ppi open-cell CleanFoam
Head width	6.2 mm (0.244")
Head thickness	5.0 mm (0.197")
Head length	17.0 mm (0.669")
Handle material	Polypropylene
Handle width	3.2 mm (0.126")
Handle thickness	3.2 mm (0.126")
Handle length	146.0 mm (5.748")
Total swab length	163.0 mm (6.417")
Head bond	Thermal
Handle color	Light green
Design notes	Flexible head paddle; long handle

Contamination Characteristics

Property	Measurement	Test Method*
Nonvolatile residue		
IPA extractant	0.04 mg/swab	
Ions		
Chloride	0.04 µg/swab	
Sulfate	0.07 µg/swab	
Nitrate	< 0.01 µg/swab	
Phosphate	< 0.01 µg/swab	
Fluoride	0.01 µg/swab	
Potassium	0.02 µg/swab	
Calcium	0.03 µg/swab	
Sodium	0.15 µg/swab	
Magnesium	0.04 µg/swab	

TM2: Laboratory Testing For Swabs

*Test procedures available upon request.