



Technical Datasheet

VWR® BASIC BEARD COVER


CHARACTERISTICS:

- Made of non-woven SPP fabric
- Multiple colours option from white and blue.
- Nature Rubber Latex Free
- Comply with European Commission Directive 1935/2004/EC, Regulation (EU) No.10/2011, Regulation (EU) No.2016/1416 and Regulation (EU) 2017/752.

PHYSICAL PROPERTIES

Item		Test method	Standard
Weight(g/m2)		ISO3801	10±1
Break Tensile Properties (N/5cm)	MD	ISO13934-1	>15
	CD	ISO13934-1	>8
Elongation Rate(%)	MD	ISO13934-1	>30
	CD	ISO13934-1	>30

PRODUCTS AND DIMENSION SPECIFICATION

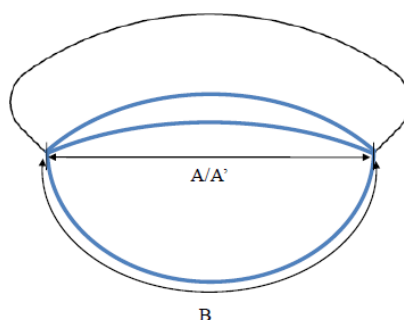

Unit:CM

ECN	Colour	Dimension		
		A	A'	B
113-8902	White	18	46	20
113-8903	Blue	18	46	20
Tolerance		±2	±2	±2

Remark: A: Relax, A': Stretch



Technical Datasheet

PACKING:

Package/Quantity	100pcs/bag, 10bags/case
Best Storage Conditions	Temp : 0- 50°C, Humidity : 45-85% without sunshine exposure
Country of Origin	China

QUALITY ASSURANCE CRITERIA:

1. Dimension and Function - Critical (AQL1.5, S-2)

- Product dimension out of spec.
- Fabric characteristics out of spec
- Sonic welding strength less than 15N/5cm

2. Visual Inspection/ Attributes - Major (AQL 2.5, L-II)

- Foreign Material
- Dirt
- Thread ends loose or too long(over 1cm)
- Holes/Tears
- Foul odor
- Discolor
- Wrong collar tag
- Wrong stitch
- Cloth surface applied wrongly
- Less than 3 stitches per centimeter

3. Visual Inspection/Attributes - Minor (AQL 4.0, L-II)

- Sewing sundries
- Elastic band end exposed
- Sewing end falling-off
- Jumping Stitch
- Missing stitch
- Unwanted folds
- Elastic tightness non-consistent

Disclaimer: VWR wants to state that this declaration will not discharge the user from his obligation to ensure the product is suitable for the intended use. - If there is any doubt ask us.

Date of issue: **November 2015**