

GateKeeper® GPU 2500 4R Gas Purifiers

Superior purity control

Utilizing the most advanced gas purification media technology, GateKeeper® gas purifiers improve purity consistency, lifetime and final purity, to deliver unsurpassed value and performance. The model 2500-4R purifier is designed for peak flow rates up to 300 slpm.


FEATURES & BENEFITS

Process control and protection	Purity control to ppt levels
	Low pressure drop across the purifier
	CE certified to the Pressure Equipment Directive (PED) and manufactured in an ISO® 9001:2000 facility
Cost effective	Regenerable – eliminates disposal issues and costs
	Long lifetime – improved cost of ownership
Safe and simple to use	Use ambient temperature purification – no heat or power required to operate
	Insensitive to orientation (horizontal/vertical)



PERFORMANCE DATA

Pressure Drop vs. Gas Flow Rate*

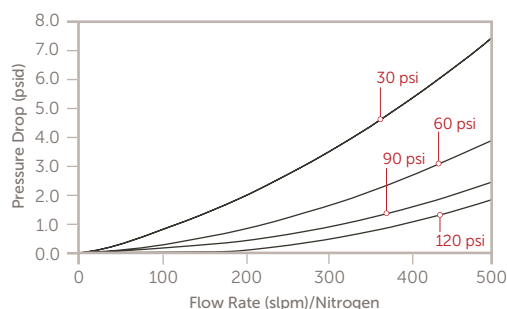

*The flow rate displayed on this graph may exceed maximum flow rate specification of the purifier model referenced in this data sheet. Please refer to maximum flow rate in the specifications section of this data sheet.

Note: Pressure drop may vary depending on media type.

SPECIFICATIONS

Materials of construction (housing)	316L stainless steel, electropolished
Particle filtration type	Wafergard® – 316L stainless steel membrane
Particle retention	Up to 3 LRV* for particles larger than 0.003 µm
Filtration removal rating	≥0.003 µm
Operating temperature	0–65°C (32–149°F)
Fitting size and type	¼" gasket seal**
Fitting configuration	Male-to-male
Operating pressure	1.01 barg–34.8 barg (0 psig–505 psig)
Maximum flow rate	300 slpm
Leak rating	1 × 10 ⁻⁹ atm cc/sec
Dimensions	439 mm (17.3") L × Ø102 mm (4")
Approximate weight	6.3 kg (13.9 lbs)

*Referenced as most penetration particle size.

**Also referred to as VCR® or face seal.

AVAILABLE MEDIA

Media	Gases purified	Contaminants removed	Outlet purity	Nominal flow rate ³
DZ	CO ₂	Volatile acids	<1 ppt	74 slpm
		Volatile bases	<1 ppt	
		Refractories	<1 ppt	
		Condensable organics	<1 ppt	
		H ₂ O	<1 ppb	
		O ₂	<200 ppt	
EX	H ₂ , N ₂ , Noble gases, H ₂ /N ₂ , H ₂ /Noble gases	H ₂ O, CO ₂	<100 ppt in H ₂ and N ₂	123 slpm
		O ₂	<250 ppt in H ₂ and N ₂	
		CO	<1 ppb in H ₂ and N ₂	
		CxHy (45–100 amu)	<10 ppt	
		CxHy (>100 amu)	<1 ppt	
		Refractory compounds (as HMDSO)	<1 ppt	

AVAILABLE MEDIA (CONTINUED)

Media	Gases purified	Contaminants removed	Outlet purity	Nominal flow rate ³
HX	H ₂ , N ₂ , Noble gases, H ₂ /N ₂ , H ₂ /Noble gases	H ₂ O, O ₂ , CO, CO ₂	<100 ppt in H ₂ and N ₂	123 slpm
IX	N ₂ , Noble gases	H ₂ O, O ₂ , CO, CO ₂ , H ₂	<100 ppt in Ar and N ₂	61 slpm
	Freon ¹ 13, 14, 23, 41, 116, 218	H ₂ O, O ₂		
NX	O ₂	CO ₂	<1 ppb	167 slpm
		H ₂ O	<1 ppb	
OP	CDA, N ₂ , Noble gases	H ₂ O	<100 ppt in N ₂	129 slpm
		Condensable organics (as Toluene)	<1 ppt	
		Non-condensable organics ² (as Butane)	<5 ppt	
		Refractory compounds (as HMDSO)	<1 ppt	
		Volatile acids (as SO ₂)	<1 ppt	
		Volatile bases (as NH ₂)	<10 ppt	
SX	NH ₃	H ₂ O	<2 ppb in NH ₃	55 slpm
		CO ₂	<1 ppb	
		O ₂	<1 ppb	
		Hydrocarbons	<1 ppt	
TX	CDA, N ₂ , Noble gases, CO ₂ , NH ₃	Condensable organics (as Toluene)	<1 ppt	170 slpm ⁴
		Non-condensable organics ² (as Butane)	<5 ppt	
		Refractory compounds (as HMDSO)	<1 ppt	
WX	CDA, H ₂ , N ₂ , Noble gases, CO ₂ , NH ₂ , AsH ₃ , PH ₃ , GeH ₄ , SiH ₄	H ₂ O	<100 ppt in N ₂	515 slpm ⁵
			<12 ppb in NH ₃	

¹ Removal of H₂O and O₂ only.

² Consult Entegris with specific non-condensable contaminants.


³ With a 1 ppm H₂O impurity inlet challenge

⁴ With a 1 ppm Toluene impurity inlet challenge over 1 year

⁵ Lifetime will exceed 1 year at its maximum flow rate

ORDERING INFORMATION

GateKeeper 2500 4R Gas Purifiers: part number

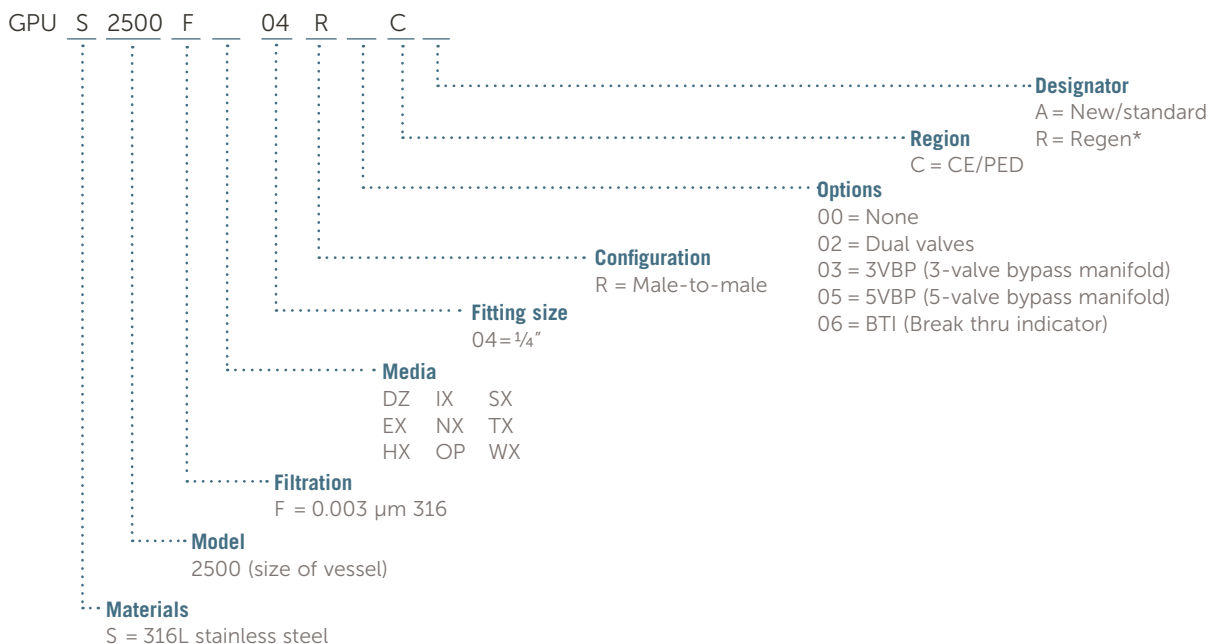

*Contact Entegris to determine if the purifier is designed for regeneration.

FOR MORE INFORMATION

Please call your Regional Customer Service Center today to learn what Entegris can do for you. Visit entegris.com and select the Contact Us link to find the customer service center nearest you.

TERMS AND CONDITIONS OF SALE

All purchases are subject to Entegris' Terms and Conditions of Sale. To view and print this information, visit entegris.com and select the Terms & Conditions link in the footer.



Corporate Headquarters
129 Concord Road
Billerica, MA 01821
USA

Customer Service
Tel +1 952 556 4181
Fax +1 952 556 8022
Toll Free 800 394 4083

Entegris®, the Entegris Rings Design™, Pure Advantage™, and other product names are trademarks of Entegris, Inc. as listed on entegris.com/trademarks. All third-party product names, logos, and company names are trademarks or registered trademarks of their respective owners. Use of them does not imply any affiliation, sponsorship, or endorsement by the trademark owner.

©2015–2017 Entegris, Inc. | All rights reserved. | Printed in the USA | 4521-7894ENT-1117