



Item # _____

We put space to work.

Job _____

Super Erecta EZ-ADD Shelf




A wire shelf that is easily added or removed from a Metro wire shelving unit without dismantling the shelving unit. Patent pending one-piece polymer collar has a built-in bead that captures the groove in the 1" (25mm) diameter post. A stainless lock plate ensures a tight fit for the collar assembly and holds the shelf in position. EZ-ADD shelves have a load rating (evenly distributed) of 400lbs (181kg).

- Add/remove an EZ-ADD shelf easily without dismantling the shelving unit.
- Add more storage levels faster than conventional wire shelving.
- Load Capacity per Shelf: 400lbs (181kg) evenly distributed.
- Chrome and Metroseal Green finishes. Metroseal has a 12-year limited warranty against rust and corrosion.
- Single packs: consist of the shelf, (4) EZ-ADD collars and (4) lock plates.
- Retrofits easily to existing Metro wire shelving units.
- NSF listed

Material Specifications and Usage Guidelines

- Wire shelf: cold rolled steel.
- Chrome: genuine nickel chrome with a protective lacquer exterior coat.
- Metroseal Green: Corrosion-resistant Epoxy coating with built-in Microban® protection over a protective zinc substrate. Microban antimicrobial product protection continuously fights the growth of bacteria, mold, and mildew that cause stains and odors.
- Collar: Nylon
- Lock Plate: Type 304 stainless steel.
- Continuous Temperature Usage: -20 to 120F (-29 to 49C).
- EZ-ADD components are designed for use with Metro brand wire shelving.

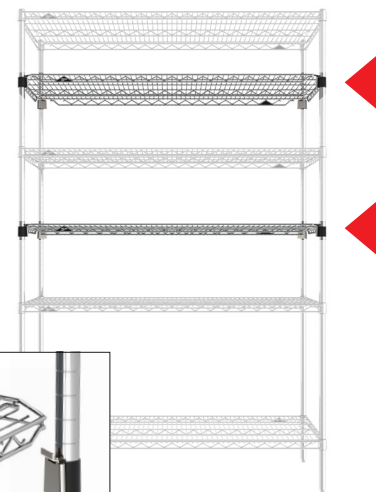

EZ-ADD shelves increase storage and organization without dismantling the shelving unit.



Also Available in Metroseal Green



MICROBAN® and the MICROBAN® symbol are registered trademarks of the Microban® Products Company, Huntersville, NC. Microban® product protection does not by itself protect a user from food borne illness. Product must be routinely cleaned.



InterMetro Industries Corporation
North Washington Street, Wilkes-Barre, PA 18705
Product Information. U.S. and Canada: 1.800.992.1776
Outside U.S. and Canada: www.metro.com/contactus

LO2-262
Printed in U.S.A. 4/23

Information and specifications are subject to change without notice. Please confirm at time of order.

Copyright © 2023 InterMetro Industries Corp.



Super Erecta EZ-ADD Shelf & Preconfigured Models

10-02



Super Erecta EZ-ADD Shelf & Preconfigured Models

EZ-ADD Wire Shelves

- EZ-ADD Shelves must be added within a unit having four posts.
- Collars and lock plates are included with each shelf.



Chrome Cat. No.	Metroseal Green Cat. No.	Nominal Width/Length (in.) (mm)		Approx Pkd. Weight (lbs.) (kg)	
EZA-1836NC	EZA-1836NK3	18x36	457 x 914	8.7	3.9
EZA-1848NC	EZA-1848NK3	18x48	457 x 1219	11.3	5.1
EZA-1860NC	EZA-1860NK3	18x60	457 x 1524	15.1	6.8
EZA-2436NC	EZA-2436NK3	24x36	610 x 914	11.8	5.4
EZA-2448NC	EZA-2448NK3	24x48	610 x 1219	15.3	6.9
EZA-2460NC	EZA-2460NK3	24x60	610 x 1524	18.8	8.5

Actual Width = Nominal

Actual Length: Subtract 0.25" (6mm) from nominal length.

EZ-ADD Wire Shelf Replacement Hardware Bag

Includes (4) EZ-ADD collars and (4) lock plates
Cat. No. **EZA-SCKIT**



Full Shelving Units – Convenience Models

These units as shown are ordered under one model number, but will ship in multiple cartons.

Stationary - 74.5" (1892mm) Actual Height

- Stationary 6-tier: (4) Super Erecta Shelves, (2) EZ-ADD Shelves, (4) 74" Posts.

Chrome Cat. No.	Metroseal Green Cat. No.	Nominal Width/Length (in.) (mm)		Approx Pkd. Weight (lbs.) (kg)	
SEZ-183674C-S-42	SEZ-183674K3-S-42	18x36	457x914	68	31
SEZ-184874C-S-42	SEZ-184874K3-S-42	18x48	457x1219	83	38
SEZ-186074C-S-42	SEZ-186074K3-S-42	18x60	457x1524	106	48
SEZ-243674C-S-42	SEZ-243674K3-S-42	24x36	610x914	86	39
SEZ-244874C-S-42	SEZ-244874K3-S-42	24x48	610x1219	104	47
SEZ-246074C-S-42	SEZ-246074K3-S-42	24x60	610x1524	132	60

Actual Width: Add 0.125" (3.2mm) to nominal width.

Actual Length: Subtract 0.125" (3.2mm) from nominal length.



Mobile - 67.9" (1725mm) Actual Height

- Mobile 5-tier: (4) Super Erecta Shelves, (1) EZ-ADD Shelf, (4) 63" Posts, (2) Swivel Casters, (2) Swivel Brake Casters.

NOTE: Chrome units have two 5MP and two 5MPB chrome plated casters with polyurethane tread while Metroseal units have two 5PC swivel and two 5PCB swivel brake polymer casters with polyurethane tread.

Chrome Cat. No.	Metroseal Green Cat. No.	Nominal Width/Length (in.) (mm)		Approx Pkd. Weight (lbs.) (kg)	
SEZ-183668C-MU-41	SEZ-183668K3-MP-41	18x36	457x914	63	29
SEZ-184868C-MU-41	SEZ-184868K3-MP-41	18x48	457x1219	76	34
SEZ-186068C-MU-41	SEZ-186068K3-MP-41	18x60	457x1524	95	43
SEZ-243668C-MU-41	SEZ-243668K3-MP-41	24x36	610x914	78	36
SEZ-244868C-MU-41	SEZ-244868K3-MP-41	24x48	610x1219	93	42
SEZ-246068C-MU-41	SEZ-246068K3-MP-41	24x60	610x1524	117	53

Actual Width/Length: Add 0.25" (64mm) to nominal length/width.





Super Erecta EZ-ADD Shelf & Preconfigured Models




Configurations and Load Ratings


- EZ-ADD shelves must be used within a shelving unit having four posts.
- You cannot connect another shelf to an EZ-ADD shelf with an "S" Hook.
- Unit load ratings (evenly distributed) are dependent on the number of Super Erecta shelves, Super Adjustable shelves, Super Erecta Pro shelves, and/or three-sided double snake frames used.
- EZ-ADD shelves are not recommended for Over-the-Road applications.

Freestanding Stationary Units with three or more Super Erecta (SES), Super Adjustable (SASE), or Super Erecta Pro (SE PRO) shelves.

Requirements: Top and Bottom SES, Super Erecta Pro or SASE shelves; at least one SES, Super Erecta Pro or SASE shelf positioned near the middle of the post.


Shelf Types

-  Super Erecta, or Super Erecta Pro
-  Super Erecta, Super Adjustable Super Erecta, or Super Erecta Pro
-  EZ-ADD

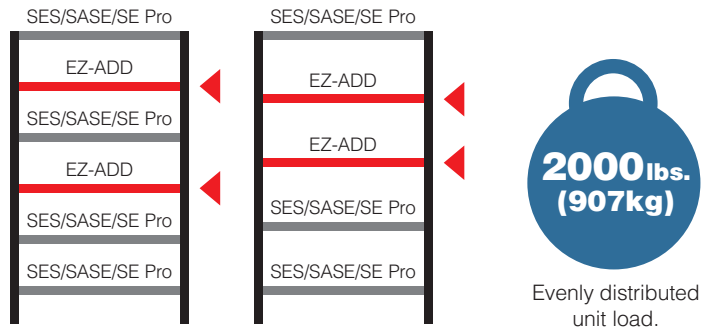


Freestanding Stationary Units with Top & Bottom Super Erecta (SES) or Super Erecta Pro (SE PRO) shelves; all intermediate shelves are EZ-ADD.

Requirements: Unit must be a freestanding unit and cannot be connected to an adjacent unit with "S" hooks.

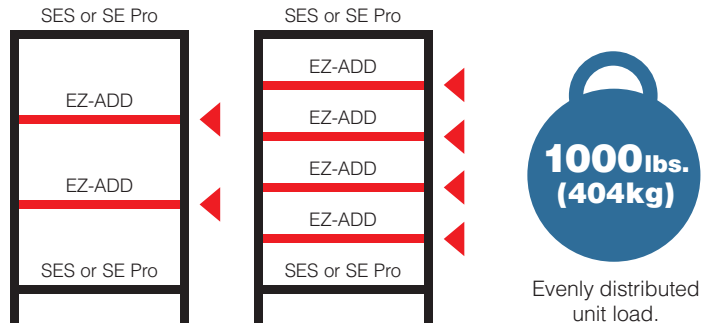


Mobile Unit Requirements

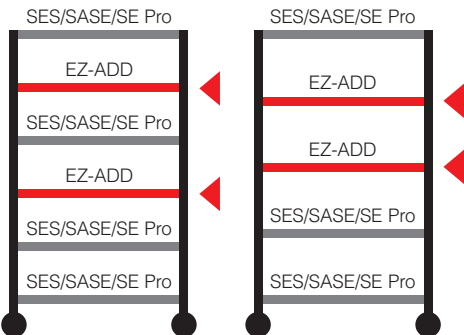

For units with posts taller than 54" (1372mm)

- Units using posts taller than 54" must have top and bottom SES, Super Erecta Pro, or SASE shelves and (1) intermediate SES, Super Erecta Pro shelf, SASE shelf, or three sided frame positioned near the middle of the post.

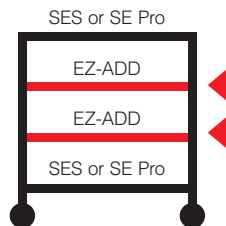

For units with posts 54" and shorter

- Units using posts that are 54" or shorter must have a minimum of a top and bottom Super Erecta or Super Erecta Pro shelf.



Job _____



We put space to work.

Super Erecta EZ-ADD Shelf & Preconfigured Models

Security Units

- EZ-ADD shelves may be used as the intermediate shelves on security units.

NOTE: A standard fixed shelf is not required in the middle.


NOTE FOR HEAVY DUTY MOBILE USES: When the unit will experience regular travel on/off elevators, to/from the loading dock, standard SES shelves are recommended for middle shelves.



Top-Track

End Units


- Top and bottom shelves must be Super Erecta (SES) or Super Erecta Pro (SES PRO).
- Two more fixed collar shelves are required in the middle and can be Super Erecta (SES), Super Erecta Pro (SES PRO), or Super Adjustable Super Erecta (SASE).
- EZ-ADD can be used as additional optional shelves.

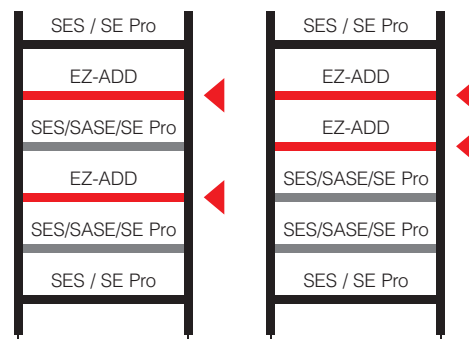

Mobile Units

- Top and bottom shelves must be Super Erecta (SES) or Super Erecta Pro (SES PRO).
- Two more fixed collar shelves are required in the middle and can be Super Erecta (SES), Super Erecta Pro (SES PRO), or Super Adjustable Super Erecta (SASE).
- EZ-ADD can be used as additional optional shelves.

NOTE: For more heavily loaded systems, Super Erecta or Super Erecta Pro shelves are recommended for all intermediate shelves.

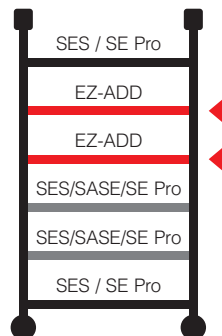

qwikTRAK

Mobile & End Units

- Follow the rules for configuring freestanding stationary and mobile shelving on page 3.

NOTE: For more heavily loaded systems, Super Erecta or Super Erecta Pro shelves are recommended for the intermediate shelves.

an Ali Group Company



The Spirit of Excellence