



Profit from the Eagle Advantage®

# Specification Sheet

## Short Form Specifications

Eagle One-Compartment Sink, model \_\_\_\_\_, with 2"-wide "Euro-Style" edging on front and sides. Sink bowl is heavy gauge type 304 stainless steel, with 13½" water level, deep drawn, seamless and have all corners covered. Top—including backsplash, and drainboards (when required)—is heavy gauge type 430 stainless steel. Drainboards shall be "V" creased for positive drainage. 9½" high backsplash with 1" upturn and tile edge. Legs to be 1½" O.D. galvanized tubing with front-to-back crossbracing, and 1" high impact plastic adjustable bullet feet.



### Options / Accessories

- |  |  |
|--|--|
| <input type="checkbox"/> Stainless steel legs        | <input type="checkbox"/> Faucets       |
| <input type="checkbox"/> Stainless steel bullet feet | <input type="checkbox"/> Sink covers   |
| <input type="checkbox"/> Lever drains                | <input type="checkbox"/> Waste outlets |
| <input type="checkbox"/> Twist handle drains         | <input type="checkbox"/> Sink kits     |
| <input type="checkbox"/> Twist drain brackets        | <input type="checkbox"/> Overflow hole |

**EAGLE GROUP**  
 100 Industrial Boulevard, Clayton, DE 19938-8903 USA  
 Phone: 302-653-3000 • Fax: 302-653-2065  
 www.eaglegrp.com

**Foodservice Division: Phone 800-441-8440**  
**MHC/Retail Display Divisions: Phone 800-637-5100**

For custom configuration or fabrication needs, contact our **SpecFAB Division**.  
 Phone: 302-653-3000 • Fax: 302-653-3091 • e-mail: specfab@eaglegrp.com

**Spec sheets available for viewing, printing or downloading from our online literature library at [www.eaglegrp.com](http://www.eaglegrp.com)**

*Eagle Foodservice Equipment, Eagle MHC, SpecFAB, and Retail Display are divisions of Eagle Group. ©2011 by the Eagle Group*

Item No.:	_____
Project No.:	_____
S.I.S. No.:	_____

## 414 Series Coved Corner One-Compartment Sinks

### MODELS:

- |                                       |                                       |                                       |                                       |
|---------------------------------------|---------------------------------------|---------------------------------------|---------------------------------------|
| <input type="checkbox"/> 414-16-1     | <input type="checkbox"/> 414-18-1     | <input type="checkbox"/> 414-22-1     | <input type="checkbox"/> 414-24-1     |
| <input type="checkbox"/> 414-16-1-18  | <input type="checkbox"/> 414-18-1-18  | <input type="checkbox"/> 414-22-1-18  | <input type="checkbox"/> 414-24-1-18  |
| <input type="checkbox"/> 414-16-1-18L | <input type="checkbox"/> 414-18-1-18L | <input type="checkbox"/> 414-22-1-18L | <input type="checkbox"/> 414-24-1-18L |
| <input type="checkbox"/> 414-16-1-18R | <input type="checkbox"/> 414-18-1-18R | <input type="checkbox"/> 414-22-1-18R | <input type="checkbox"/> 414-24-1-18R |
| <input type="checkbox"/> 414-16-1-24  | <input type="checkbox"/> 414-18-1-24  | <input type="checkbox"/> 414-22-1-24  | <input type="checkbox"/> 414-24-1-24  |
| <input type="checkbox"/> 414-16-1-24L | <input type="checkbox"/> 414-18-1-24L | <input type="checkbox"/> 414-22-1-24L | <input type="checkbox"/> 414-24-1-24L |
| <input type="checkbox"/> 414-16-1-24R | <input type="checkbox"/> 414-18-1-24R | <input type="checkbox"/> 414-22-1-24R | <input type="checkbox"/> 414-24-1-24R |

### Materials

- Sink bowl: Heavy gauge type 304 stainless steel.
- Top: Drainboards, backsplash and euro-style edging are heavy gauge type 430 stainless steel.
- Legs: 1½" (41mm)-diameter heavy-gauge galvanized tubing with plated 12-gauge gussets and high-impact corrosion resistant fully adjustable bullet feet - crossbracing is 1" (25mm)-diameter heavy-gauge galvanized tubing.

### Design and Construction Features

- Bowl features deep-drawn one-piece seamless construction, using state-of-the-art hydraulic presses.
- Sink bowl has generous radius with a minimum dimension of 3" (76mm) and are rectangular for maximum capacity.
- New 20" x 16" (508 x 406mm) bowl design, with enhanced polishing techniques.
- 13½" (343mm) water level is standard.
- Swirl-away drainage.
- Leg gusset assemblies welded adjacent to sink bowl for maximum weight support and stability.
- 9½" (241mm) standard backsplash includes 1" (25mm) upturn and tile edge for easy installation and feathering to wall/splash surface.
- "V" creased drainboards for positive drainage.

### Mechanical:

- Water supply is ½" (13mm) IPS for hot and cold lines.
- Faucet holes are 1½" (29mm) punched on 8" (203mm) centers.
- Basket-type waste drain included fits sink bowl's 3½" (89mm) opening and features 1½" (38mm) outlet.

### Certifications / Approvals







Profit from the Eagle Advantage®

Item No.: \_\_\_\_\_  
 Project No.: \_\_\_\_\_  
 S.I.S. No.: \_\_\_\_\_


# 414 Series Coved Corner One-Compartment Sinks

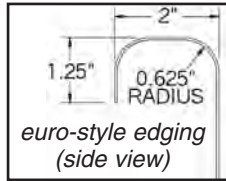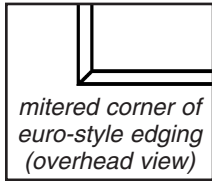

Overall widths			
bowl size		Dimension A	
in.	mm	in.	mm
20" x 16"	508 x 406	27½"	699
24" x 18"	610 x 457	31¼"	807
22" x 22"	559 x 559	29¾"	756
24" x 24"	610 x 610	31¼"	807

Drain location for rough-in			
bowl size		Dimension B	
in.	mm	in.	mm
20" x 16"	508 x 406	14"	357
24" x 18"	610 x 457	16"	406
22" x 22"	559 x 559	15"	381
24" x 24"	610 x 610	16"	406

Please note the pair of legs located under the OUTER area of drainboard (only on one-compartment sinks with one drainboard)

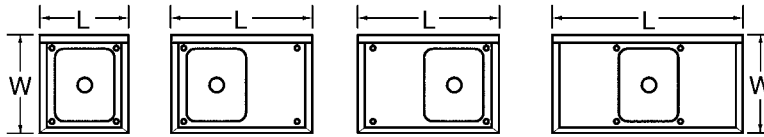model #	BOWL DIMENSIONS				DRAINBOARD quantity	DRAINBOARD length		OVERALL DIMENSIONS				weight	
	width in.	width mm	length in.	length mm		in.	mm	width in.	width mm	length in.	length mm	lbs.	kg
414-16-1	20"	508	16"	406	0	-	27¼"	699	23¼"	591	40	18.1	
414-16-1-18R or L	20"	508	16"	406	1	18"	457	27¼"	699	38⅞"	987	59	26.8
414-16-1-18	20"	508	16"	406	2	18"	457	27¼"	699	54½"	1384	78	35.4
414-16-1-24R or L	20"	508	16"	406	1	24"	610	27¼"	699	44⅞"	1140	65	29.5
414-16-1-24	20"	508	16"	406	2	24"	610	27¼"	699	66½"	1689	90	40.8
414-18-1	24"	610	18"	457	0	-	31¼"	807	25½"	648	45	20.4	
414-18-1-18R or L	24"	610	18"	457	1	18"	457	31¼"	807	40¼"	1035	64	29.0
414-18-1-18	24"	610	18"	457	2	18"	457	31¼"	807	56"	1422	83	37.6
414-18-1-24R or L	24"	610	18"	457	1	24"	610	31¼"	807	46¾"	1188	70	31.8
414-18-1-24	24"	610	18"	457	2	24"	610	31¼"	807	68"	1727	95	43.1
414-22-1	22"	559	22"	559	0	-	29¾"	756	29½"	749	55	24.9	
414-22-1-18R or L	22"	559	22"	559	1	18"	457	29¾"	756	45"	1143	74	33.6
414-22-1-18	22"	559	22"	559	2	18"	457	29¾"	756	60½"	1537	93	42.2
414-22-1-24R or L	22"	559	22"	559	1	24"	610	29¾"	756	51"	1295	80	36.3
414-22-1-24	22"	559	22"	559	2	24"	610	29¾"	756	72½"	1842	105	47.6
414-24-1	24"	610	24"	610	0	-	31¼"	807	31½"	800	60	27.2	
414-24-1-18R or L	24"	610	24"	610	1	18"	457	31¼"	807	46¾"	1188	79	35.8
414-24-1-18	24"	610	24"	610	2	18"	457	31¼"	807	62"	1575	98	44.5
414-24-1-24R or L	24"	610	24"	610	1	24"	610	31¼"	807	52¾"	1340	85	38.6
414-24-1-24	24"	610	24"	610	2	24"	610	31¼"	807	74"	1880	110	49.9

**EAGLE GROUP**  
 100 Industrial Boulevard, Clayton, DE 19938-8903 USA  
 Phone: 302-653-3000 • Fax: 302-653-2065  
 www.eaglegrp.com

Foodservice Division: Phone 800-441-8440  
 MHC/Retail Display Divisions: Phone 800-637-5100

Printed in U.S.A.  
 ©2011 by Eagle Group

Rev. 03/11

Spec sheets available for viewing, printing or downloading from our online literature library at [www.eaglegrp.com](http://www.eaglegrp.com)

Although every attempt has been made to ensure the accuracy of the information provided, we cannot be held responsible for typographical or printing errors. Information and specifications are subject to change without notice. Please confirm at time of order.