



Item # \_\_\_\_\_

Job \_\_\_\_\_

## SUPER ERECTA SHELF® PRINTED CIRCUIT BOARD TRUCKS — CBH SERIES

These 50" (1220mm)-high trucks hold boards at convenient level for seated assemblers.

- **Safe PCB Handling:** Metro PCB Trucks safely transport and store large circuit boards, or large quantities of small boards.
- **Horizontal Slides:** Horizontal slides have  $\frac{5}{8}$ " (13mm) slide spacing for highest density loading. Ideal for circuit board curing operations and for handling large quantities of unpopulated boards. Made of stainless steel, panels resist contamination and the effects of corrosive atmospheres. Slides accept boards up to  $\frac{1}{8}$ " (3mm) thick.
- **Adjustable:** Panels slide along side frames to the exact width of boards. Holding knobs at each panel corner are manually tightened to hold panels securely in place. To accommodate boards from 3" (76.2mm) to 22 $\frac{1}{2}$ " (571.5mm) deep, the vertical stop bar on the face of each panel can be placed in any of five locations.
- **Conductive:** All-metal components eliminate electrostatic build-up in properly grounded units.
- **Simplify Inventory:** Assessing inventory is simple, because you know the capacity of the fully-loaded unit.
- **Super Erecta Shelf® Construction:** Provides fast, secure assembly of unit without special tools.



SUPER ERECTA SHELF®  
Printed Circuit Board Trucks — CBH Series



InterMetro Industries Corporation  
North Washington Street  
Wilkes-Barre, PA 18705  
www.metro.com



51.03




## SUPER ERECTA SHELF® PRINTED CIRCUIT BOARD TRUCKS

### Specifications

Standard units consist of two end panels, two four-sided frames, four posts, four casters and grounding chain.

- Panels:** Panels are stainless steel with slide panels on both sides. Slides are spaced  $\frac{5}{8}$ " (13mm) apart and accept boards  $\frac{1}{8}$ " (3mm) thick. Each panel is secured to the truck frame by four brackets with knobs that tighten manually. Spacing between panels is infinitely adjustable throughout the length of the frames.
- Casters:** All models are equipped with 5" (127mm) swivel casters with non-marking resilient rubber tread. Foot-operated wheel brakes on two of the casters make it easy to "park" the unit safely.
- Conductivity:** Stainless steel grounding chain is standard on all models. Conductive casters are available on special order. If the chain and/or conductive casters are in contact with proper ground, the entire unit will remain free of any electrostatic build-up.
- Frames:** Tubular chrome-plated steel 1" (25.4mm) square with tapered corner collars which attach to the posts via aluminum sleeves and retaining rings. The panel/frame unit can be lowered in 1" (25.4mm) increments to the desired working level.

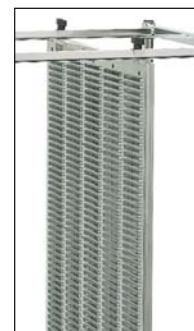

Horizontal Slides

### Dimensions

Model No.	Width		Length		Height		Maximum Board Size		Capacity Full-Size Boards	Capacity		Approx. Pkd. Wt. (lbs.) (kg)
	(in.)	(mm)	(in.)	(mm)	(in.)	(mm)	(in.)	(mm)		11 $\frac{1}{2}$ " (290mm) Boards without Center Panel	11 $\frac{1}{2}$ " (290mm) Boards with One Center Panels	
CBH534BC	26	660	38	965	50	1270	22 $\frac{1}{2}$ x 30 $\frac{1}{4}$	605 x 770	53	106	212	81 37
CBH54BC	26	660	50	1270	50	1270	22 $\frac{1}{2}$ x 42 $\frac{1}{4}$	605 x 1075	53	106	212	85 39

### Center Panel with Double Insert

(Includes one stop bar, four knobs and four holding brackets)

Model No.	Width		Length		Outside		Thickness	Inside		Approx. Pkd. Wt. (lbs.) (kg)
	(in.)	(mm)	(in.)	(mm)	(in.)	(mm)		(in.)	(mm)	
CBHP2	24	610	41	1040	1 $\frac{1}{2}$	38	1	24	22 10	

All Metro Catalog Sheets are available on our website: [www.metro.com](http://www.metro.com)



#### InterMetro Industries Corporation

North Washington Street • Wilkes-Barre, PA 18705 • 570.825.2741  
Fax: 800.638.9263 (East Coast/Canada) • Fax: 800.638.3292 (West Coast)

FOR PRODUCT INFORMATION/CUSTOMER SERVICE:

U.S./Canada/Latin America: 1.800.992.1776 • Europe: +31.76.587.7550  
Asia/Pacific: +65.6567.8003 • Middle East/Africa: +971.4.811.8286

Information and specifications are subject to change without notice. Please confirm at time of order

L02-132e  
Rev. 02/12  
Printed in U.S.A.

Copyright © 2012 InterMetro Industries Corp.

