



White Knight®
Engineered Products

9525 Monroe Road
Suite 100
Charlotte NC 28270

Phone: 704.542.6876 Fax: 704.910.8065 customerservice@wkep.com

Product Specification

Style Number: 12 T2 175S JRZY 01

WK15 3F

Revision: A

Release Date: 08.11.16

PO # _____


Inspected by _____

General Description

Garment Type	Short Sleeve T- Shirt
Class	Class 3
Tape	9720
Reference	12 T2 175S JRZY 01 for Measurement Table

Construction Details

- Vertical Tape Shall Start No More Than 1" From High Point Of Shoulder
- Tapes Shall Be Contiguous In Horizontal Direction With No More Than a 1" Gap From Seams
- Front and Back Tapes Shall Align
- Allow 1/2" - 1" Space Between Vertical and Horizontal Tapes
- Bottom of Horizontal Tapes must be at least 1.97" from Bottom Hem of Shirt
- Bottom of Sleeve Tape will Line up with top of Sleeve Hem
- For Details on Label Placement Refer to Config Specification

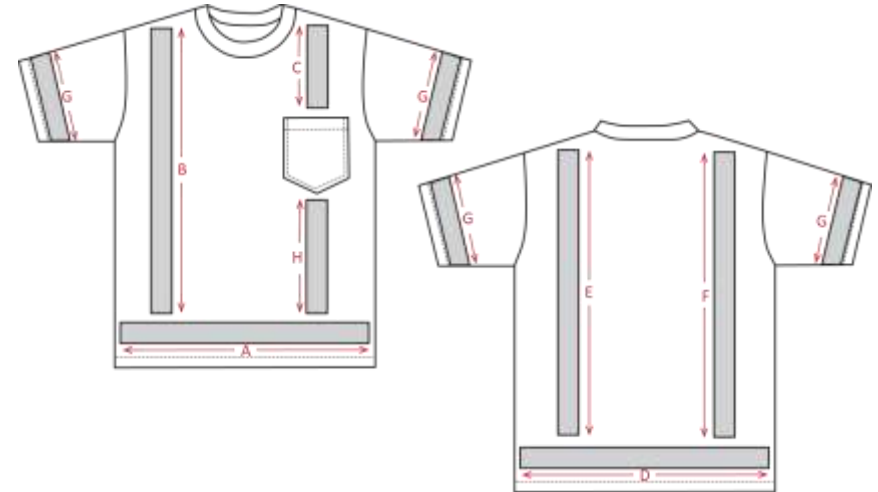

Class 3 Tape Measurements

Ref	Tape Lengths	XS	S	M	L	XL	2XL	3XL	4XL	5XL	6XL	7XL	8XL	+ / -	Actual
A	Front Horizontal (1)	15.25	18.25	19.75	21.75	23.75	25.75	27.75	29.75	31.75	33.75	36.25	38.25	0.25	
B	Front Long	20.75	21.75	23.5	22.5	21	20	19	18	17	17	17	17	0.25	
C	Left Shoulder Short	7	7	7	7	7	7	7	7	7	7	7	7	0.25	
D	Back Horizontal (1)	15.25	18.25	19.75	21.75	23.75	25.75	27.75	29.75	31.75	33.75	36.25	38.25	0.25	
E	Back Vertical Left	20.75	21.75	23.5	22.5	21	20	19	18	17	17	17	17	0.25	
F	Back Vertical Right	20.75	21.75	23.5	22.5	21	20	19	18	17	17	17	17	0.25	
G	Sleeves Circumference (2)	14.5	15	15.5	16	16.5	17	17.5	18	18.5	19	19.5	20	0.25	
H	Below Pocket Short	7	8	10	8.5	7	6	5	4	3	3	3	3	0.25	
	Total Linear Inches	135.75	146.75	158	158.5	157.5	158.5	159.5	160.5	161.5	166.5	172.5	177.5	2	
	Total Square Inches	271.5	293.5	316	317	315	317	319	321	323	333	345	355	4	

Size Medium and Above Meets Minimum Requirements of Background Material and Reflective Material to Meet ANSI/ ISEA 107-2015 Type R Class 3