



9525 Monroe Road
Suite 100
Charlotte NC 28270

Phone: 704.542.6876 Fax: 704.910.8065 customerservice@wkep.com

Product Specification

Style Number: 12 T2 175L JRZY 01
WK15 3J

Revision: A

Release Date: 08.11.16

PO # _____


Inspected by _____

General Description

Garment Type	Long Sleeve T- Shirt
Class	Class 3
Tape	5530
Reference	12 T2 175L JRZY 01 for Measurement Table

Construction Details

- Vertical Tape Shall Start No More Than 1" From High Point Of Shoulder
- Tapes Shall Be Contiguous In Horizontal Direction With No More Than a 1" Gap From Seams
- Front and Back Tapes Shall Align
- Allow 1/2" - 1" Space Between Vertical and Horizontal Tapes
- Bottom of Horizontal Tapes must be at least 1.97" from Bottom Hem of Shirt
- Sleeve Tape to be Set 5" Down from Underarm Seam, Sewn into Sleeve Seam
- For Details on Label Placement Refer to Config Specification

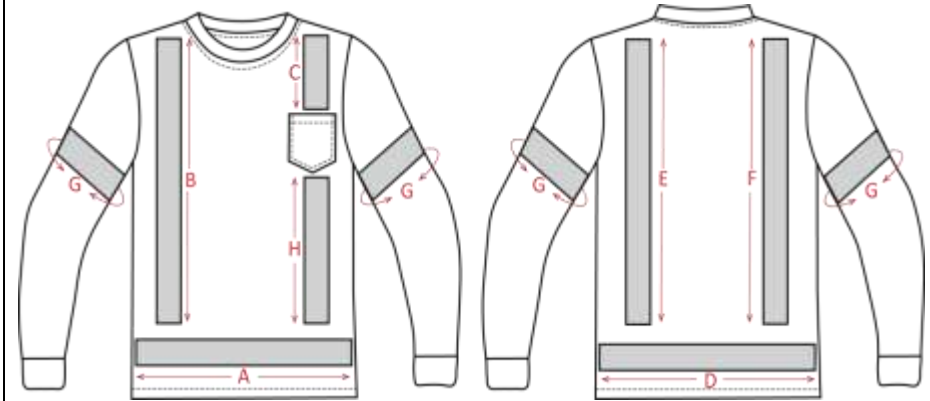

Class 3 Tape Measurements

Ref	Tape Lengths	XS	S	M	L	XL	2XL	3XL	4XL	5XL	6XL	7XL	8XL	+ / -	Actual
A	Front Horizontal (1)	15.25	18.25	19.75	21.75	23.75	25.75	27.75	29.75	31.75	33.75	36.25	38.25	0.25	
B	Front Long	20.75	21.75	22.75	21.5	20	18.5	17	17	17	17	17	17	0.25	
C	Left Shoulder Short	7	7	7	7	7	7	7	7	7	7	7	7	0.25	
D	Back Horizontal (1)	15.25	18.25	19.75	21.75	23.75	25.75	27.75	29.75	31.75	33.75	36.25	38.25	0.25	
E	Back Vertical Left	20.75	21.75	22.75	21.5	20	18.5	17	17	17	17	17	17	0.25	
F	Back Vertical Right	20.75	21.75	22.75	21.5	20	18.5	17	17	17	17	17	17	0.25	
G	Sleeve Circumference (2)	15.25	16.25	17	18	18.75	19.75	20.5	21.5	22.5	23.25	23.5	24	0.25	
H	Below Pocket Short	7	8	9	7.5	6	4.5	3	3	3	3	3	3	0.25	
	Total Linear Inches	137.25	149.25	157.75	158.5	158	158	157.5	163.5	169.5	175	180.5	185.5	2	
	Total Square Inches	274.5	298.5	315.5	317	316	316	315	327	339	350	361	371	4	

Size Medium and Above Meets Minimum Requirements of Background Material and Reflective Material to Meet ANSI/ ISEA 107-2015 Type R Class 3